 
 


***Installation Operation Manual for
Computer Shower Box***

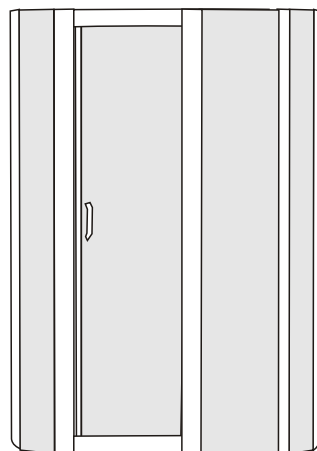

Parts List


② Aluminium frame

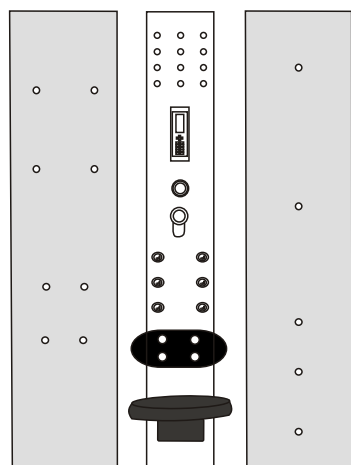


③ backwall glass

④ backwall glass

⑤ glass room

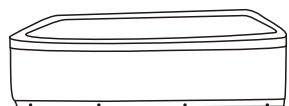


① tray

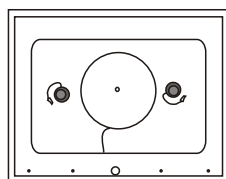


⑥ roof



⑦ hand-shower

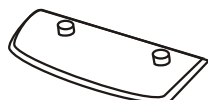

⑧ glass self

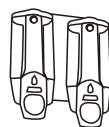


⑨ soap dispenser




⑩ Foot massage

Tools for Installation

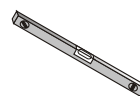

horizontal ruler

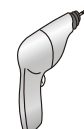

driller



tape



cross screw driver



wrench




Hexagon ring spanner




silicon gun

A

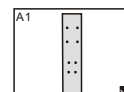


backwall glass

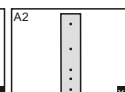


backwall glass




tapping screw

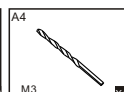


aiguille

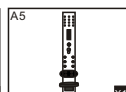

aluminium frame

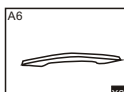


cap of aluminium frame

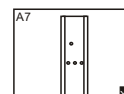


cover for aluminium frame


B

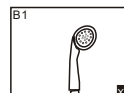

hand-shower

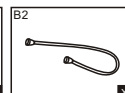


hose

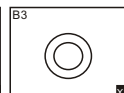


Mental Washer




Taping Screw

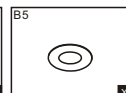


Rubber gasket

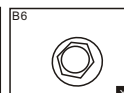


nut

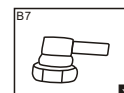


Turning joint

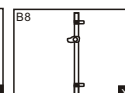


Sliding bar

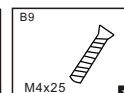


screw

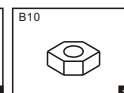


nut

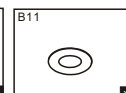


metal washer

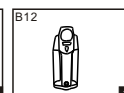


soap dispenser

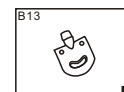


Plastic key

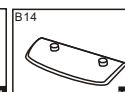


glass self

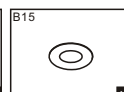


rubber gasket

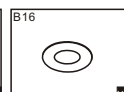

metal washer

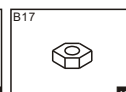


Nut

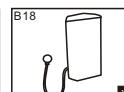


Foot massage


C

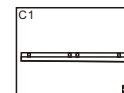


Up Rail

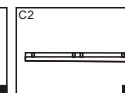


Down Rail

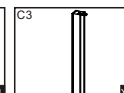


Side profile

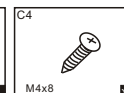


tapping screw

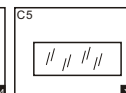


Side glass

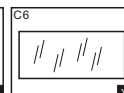


Backwall glass

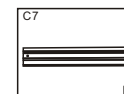


Straight Up Rail

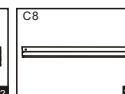


Straight Down Rail

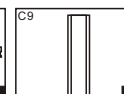

Middle profile

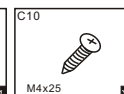


tapping screw

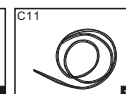


spline

D

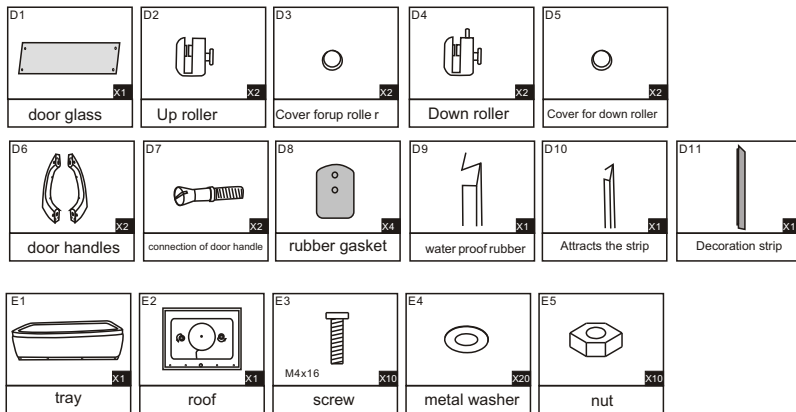


E

Installation Step

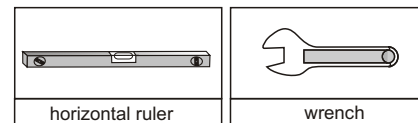



I. Install the shower tray.

1. Put the tray on the proper place, measure with horizontal ruler.

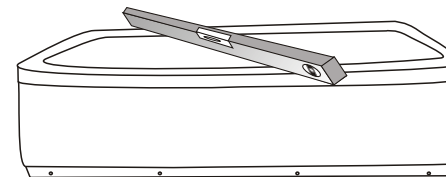


2. Adjust the legs till the tray to be horizontal.

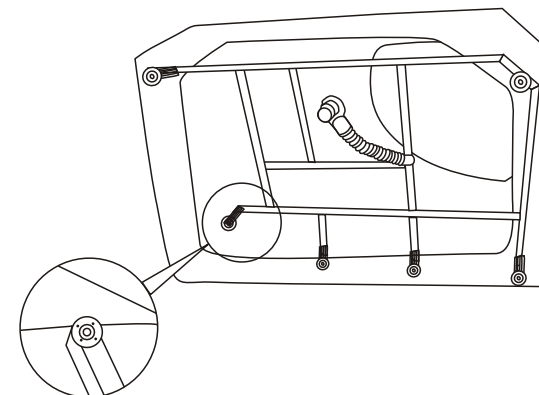

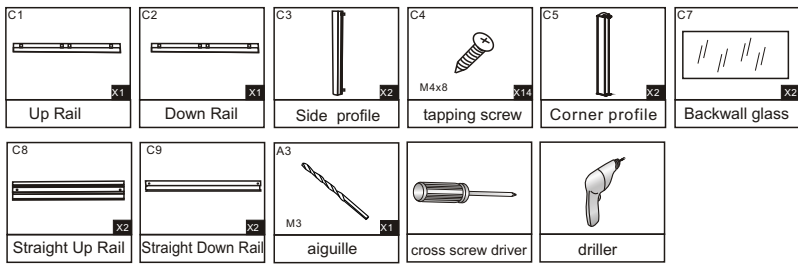


II. Install the front part .


1. Connect the up and down rail to the corner profile
2. Connect the straight up and down rail to the corner profile
3. Connect side glass to the corner profile and straight up and down rail
4. Connect side profile to the side glass and straight up and down rail

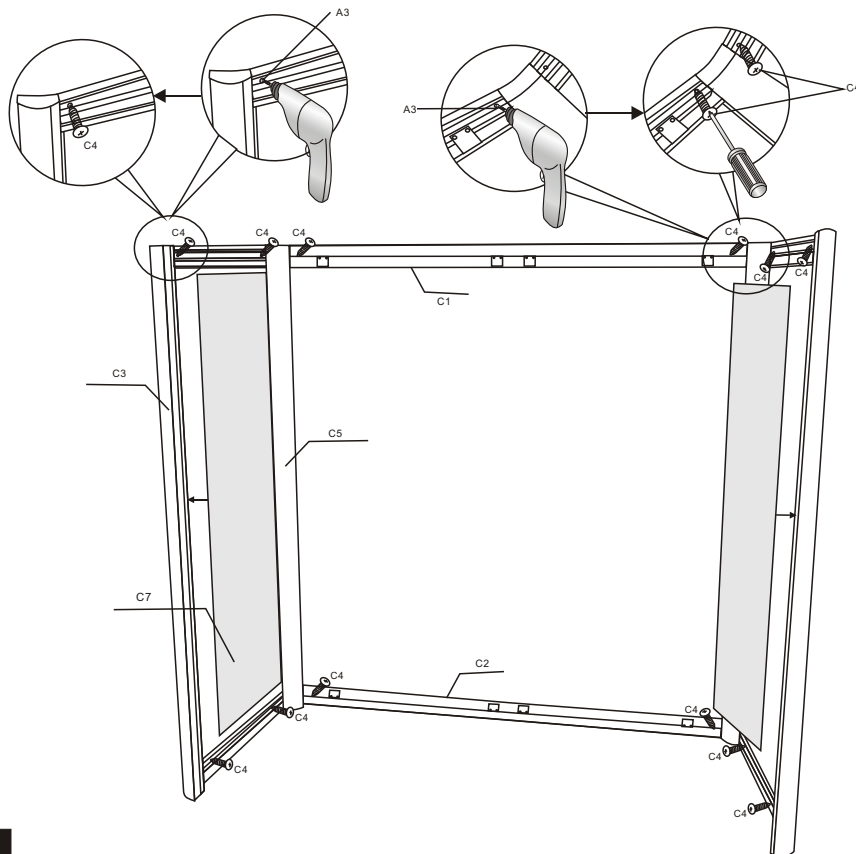

4


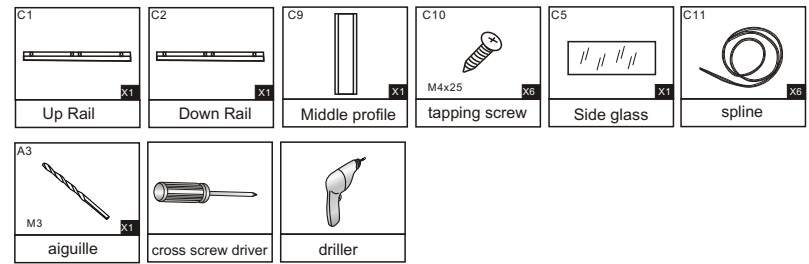


5. Connect fixed glass to corner profile and middle profile, then Insert the spline with wooden bar.

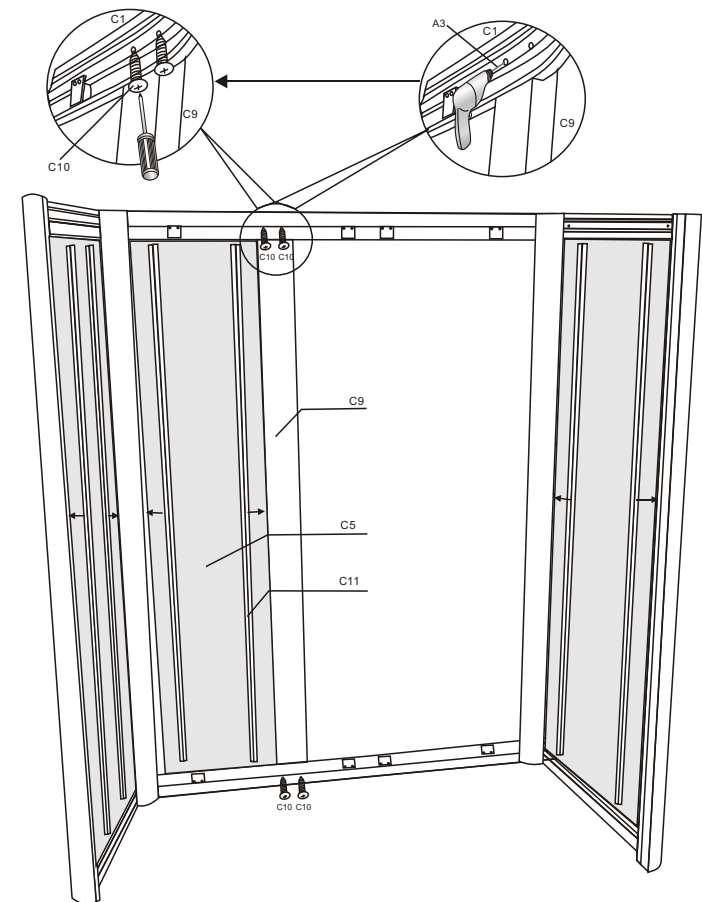


5


IV. Put the glass room upright on the tray.

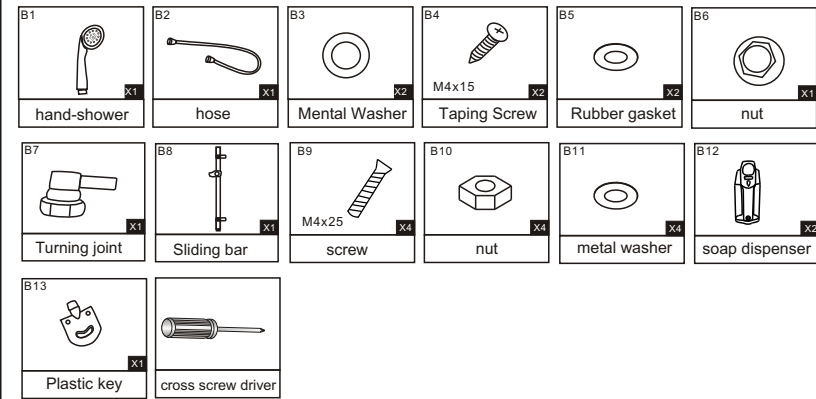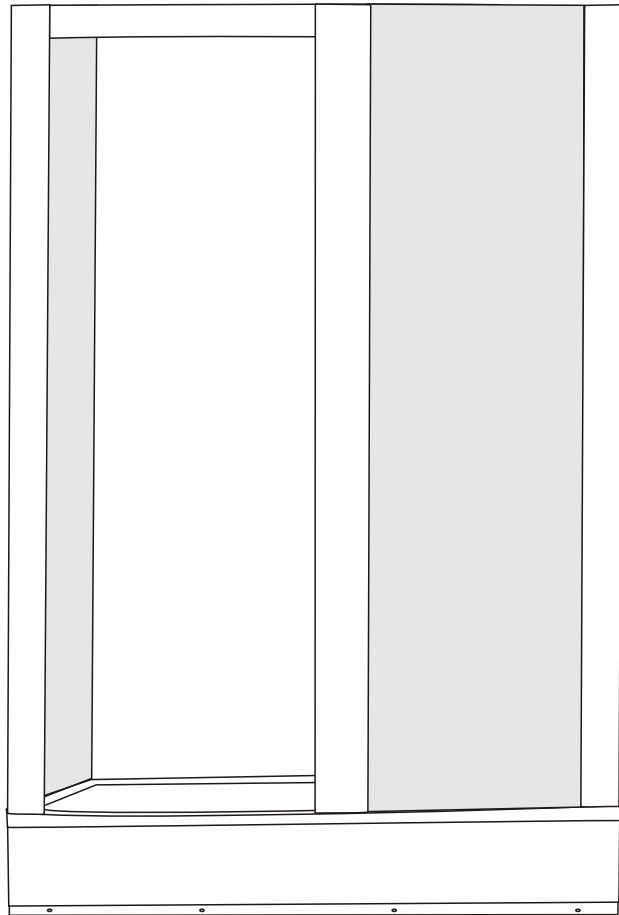



V. Install the spare parts on the backwall glass.

1.

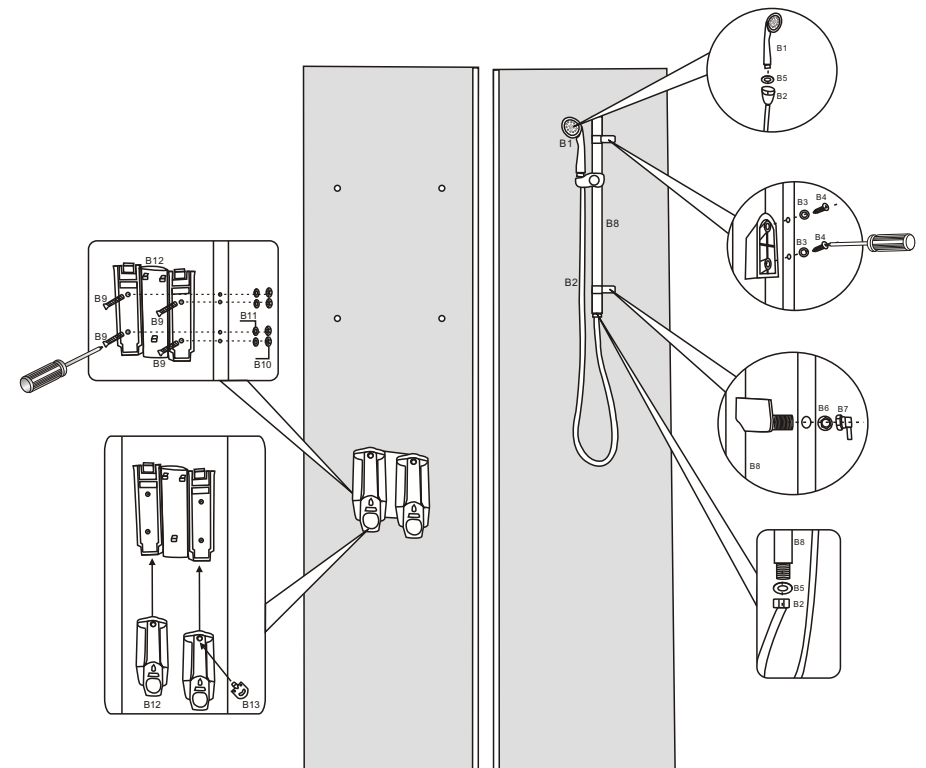



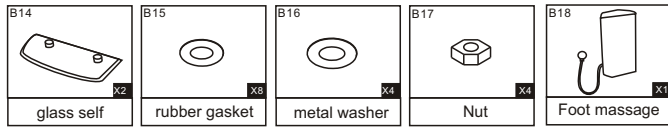


2.

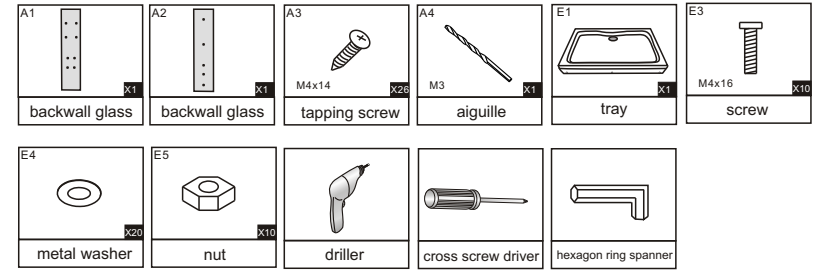
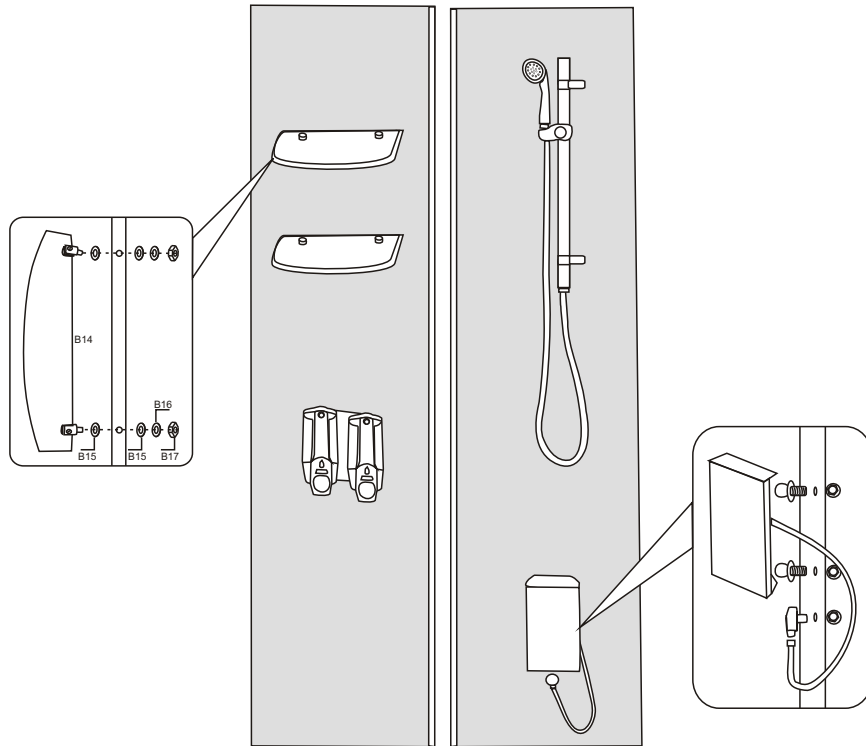


VI. Connect the backwall glass with side profile and tray.

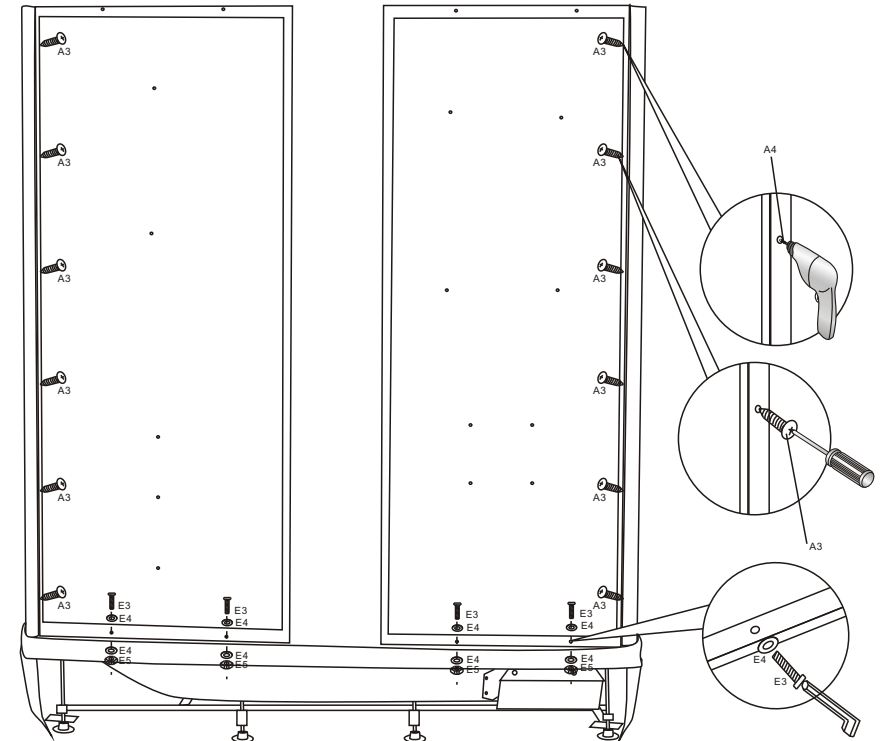


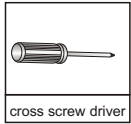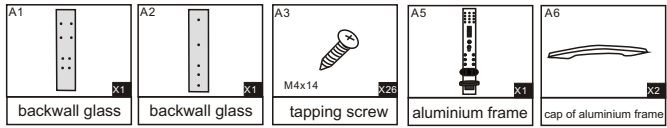


VII. Connect the aluminium frame with the backwall glass.

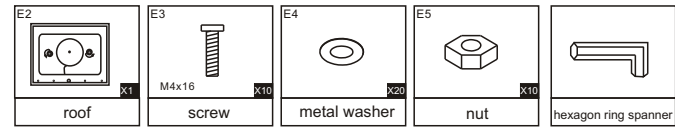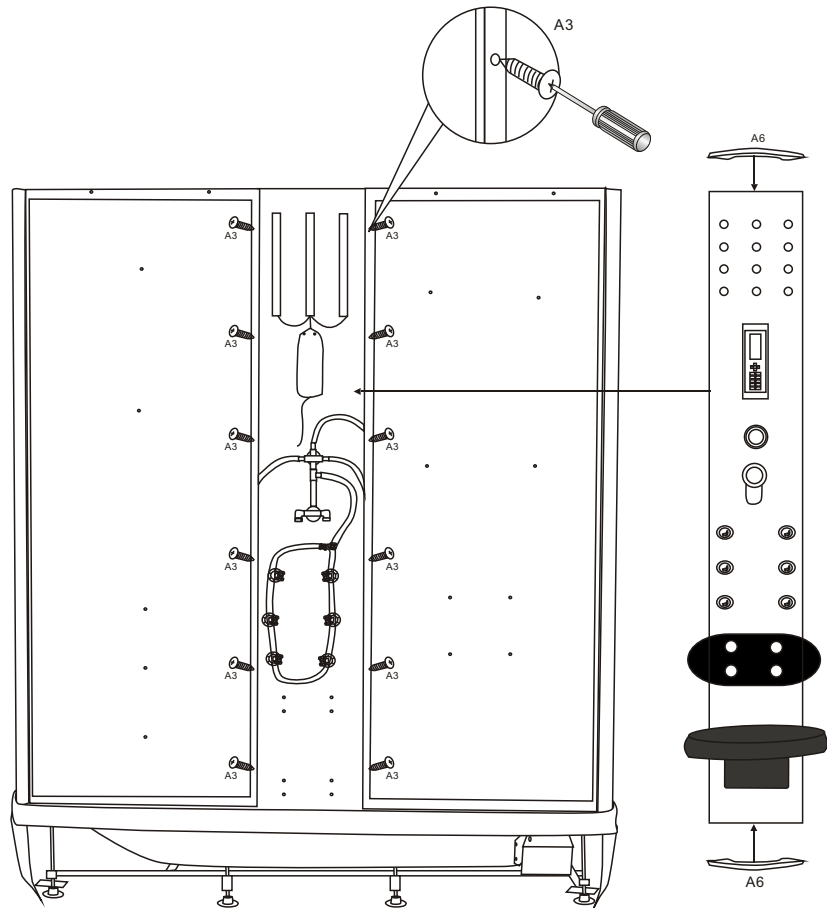


VIII. Connect the roof with cabin.

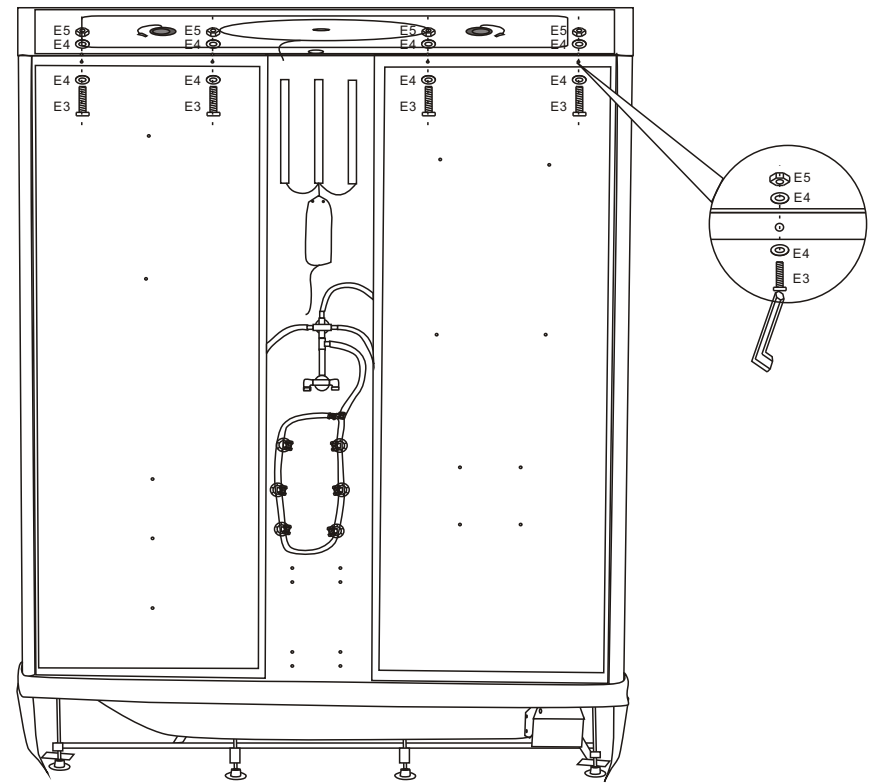


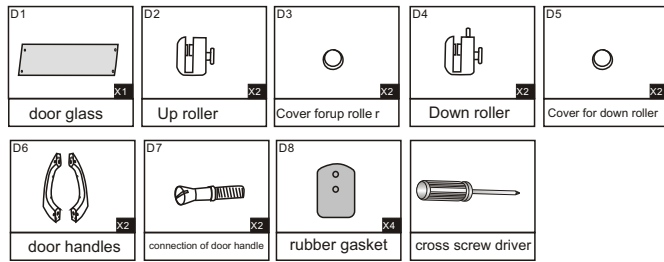


IX. Assemble the rollers and door handles to the door glass.


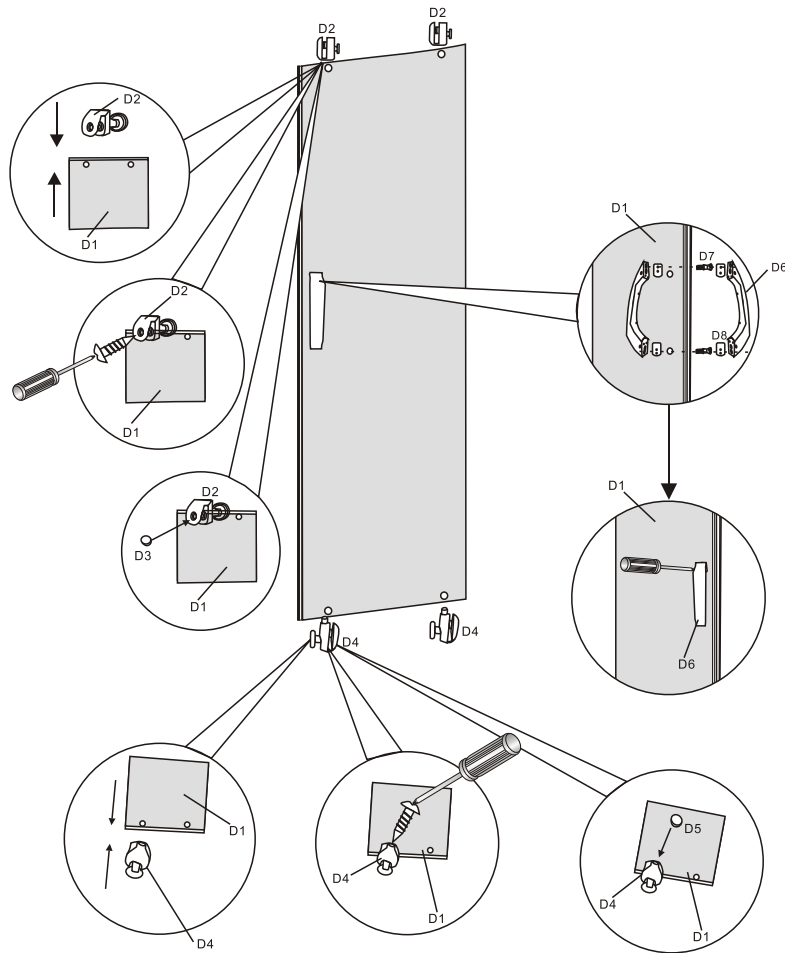


X. Put the door glass into the up and down rail.

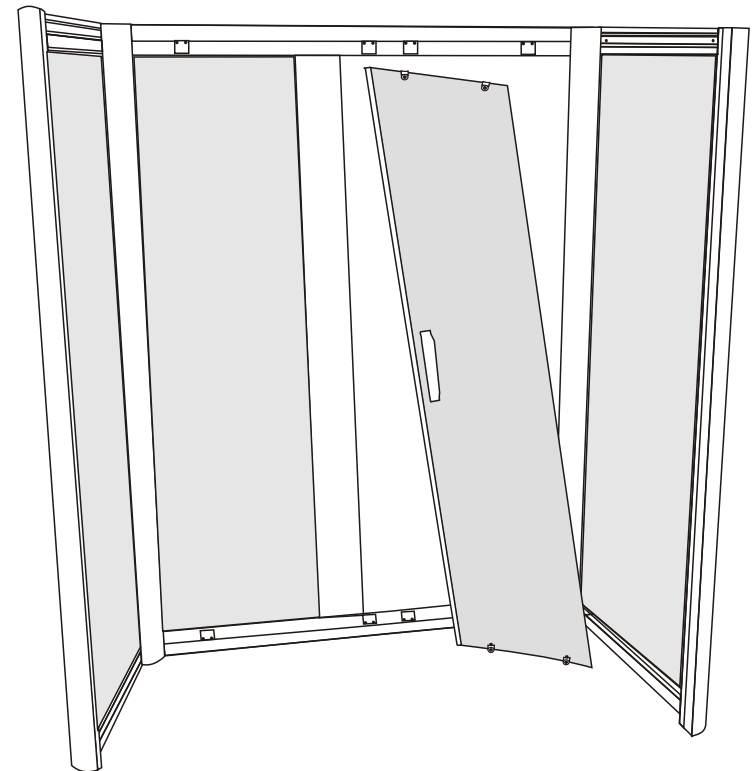


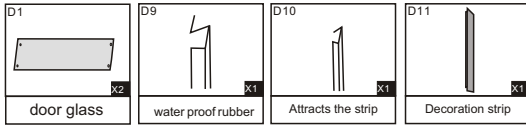


XI. Insert the water proof rubber to the door glass and put the covers on the profiles.

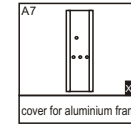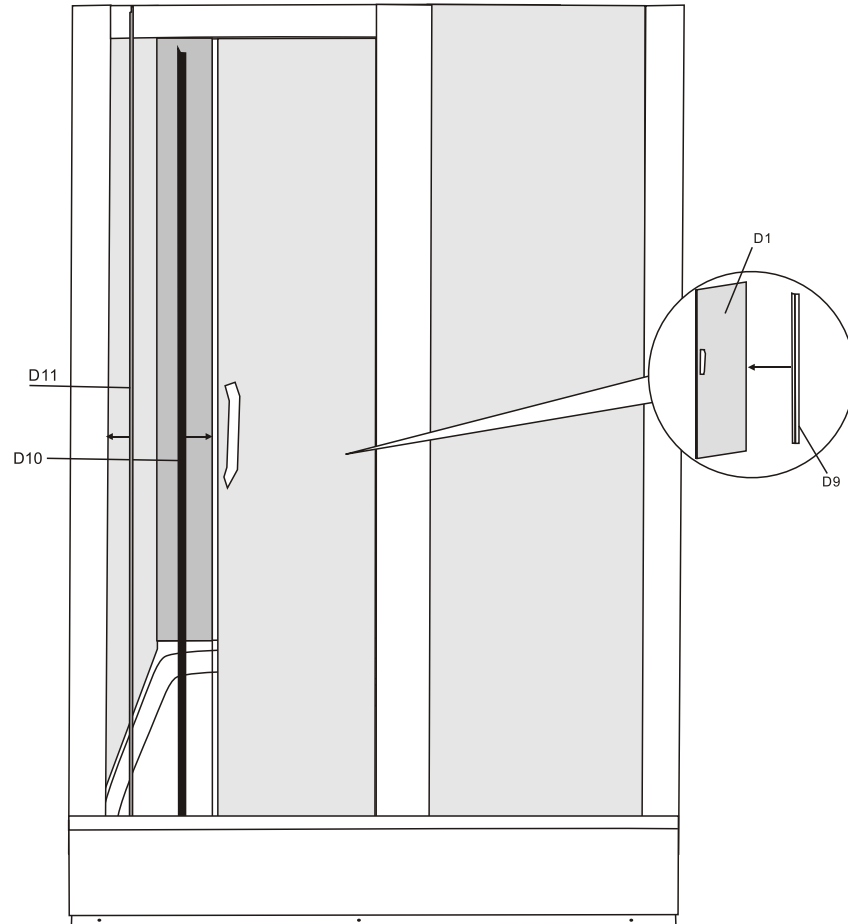


XII. Connect the water and electricity circuit

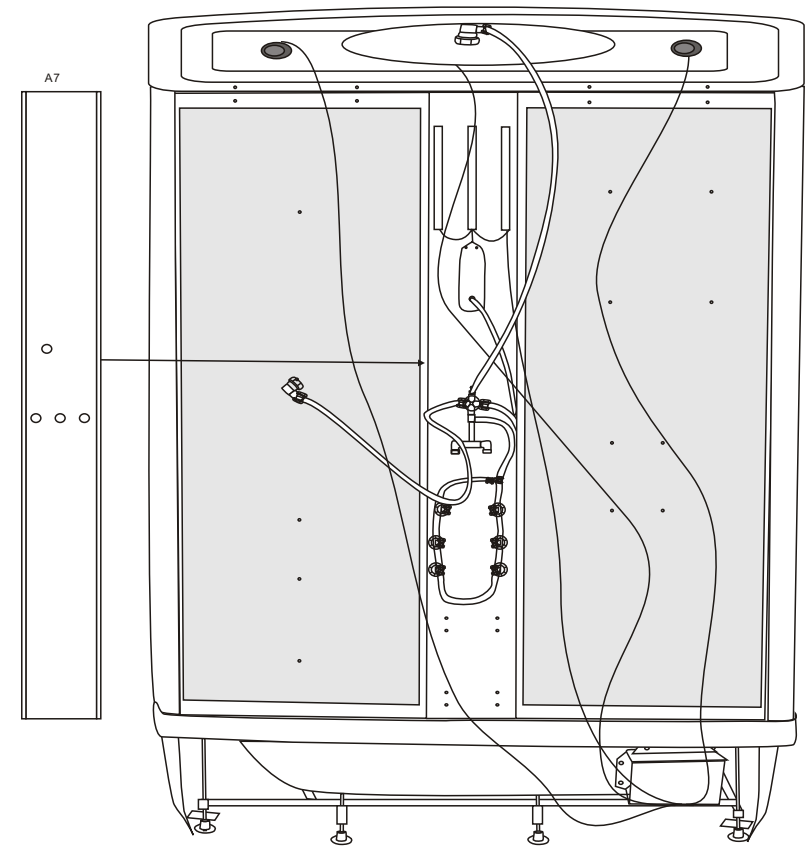

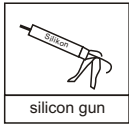


XIII. Glued the glass room, roof, tray and wall up with silicon.

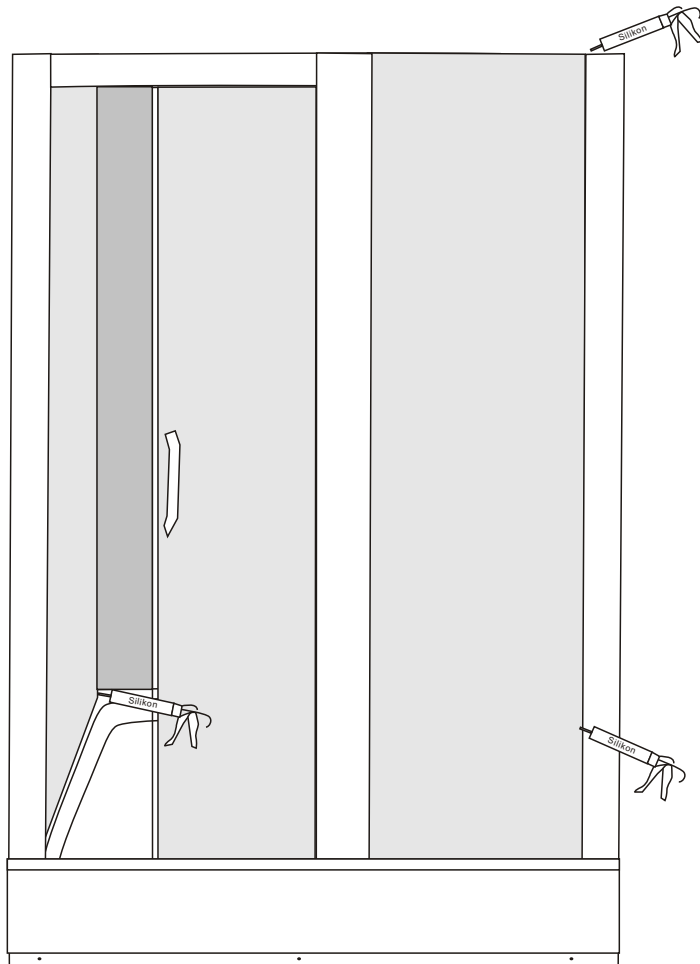

STEAM GENERATOR INSTALLATION MANUAL (Steam Optional)



Install position

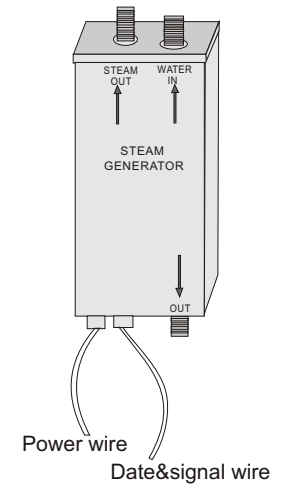

Trouble Shooting:

Trouble	Possible causes	Solutions
No steam	<ol style="list-style-type: none"> 1、 unfinished heating 2、 water shortage in the steam generator. 3、 the temperature in the showerbox. 4、 failure of water level probe. 5、 failure of over-heat protector. 6、 Failure of the heater of the steam generator. 7、 Jam or break of steam output tube. 	<ol style="list-style-type: none"> 1、 Wait till heating completed 2、 Check water-intake electromagnetic valve 3、 Reset temperature 4、 Replace water level probe. 5、 Replace over-heat protector. 6、 Replace the heater. 7、 Eliminate jam or replace tube.