


8423/8424




Installation instructions

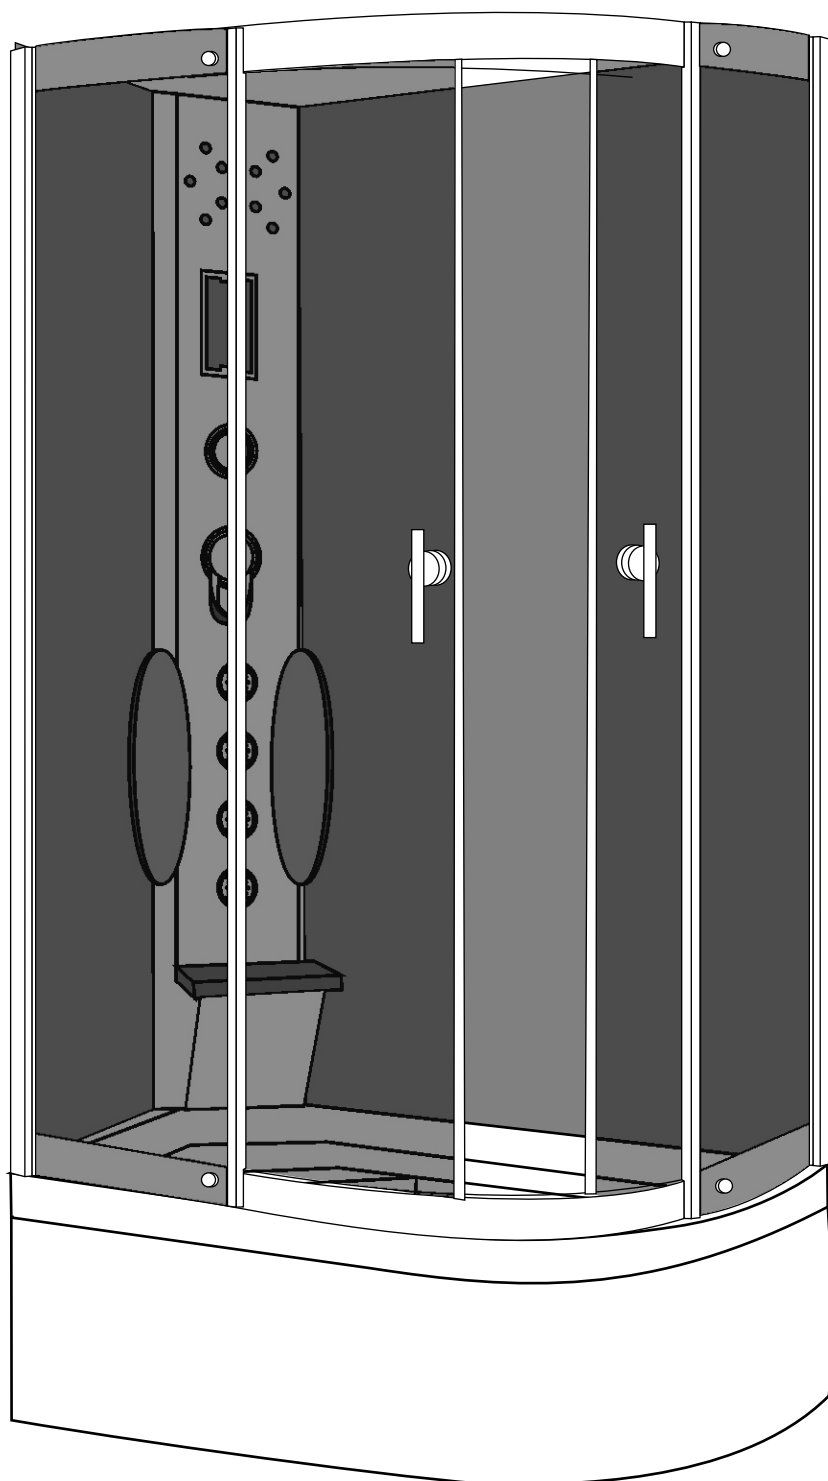



SIZE : 120*85*220 CM

8423/8424

Installation instructions

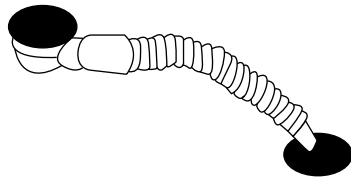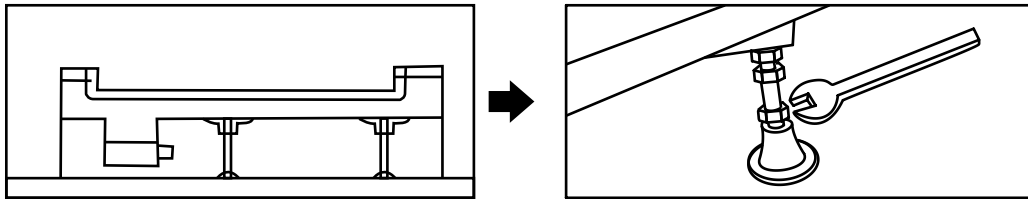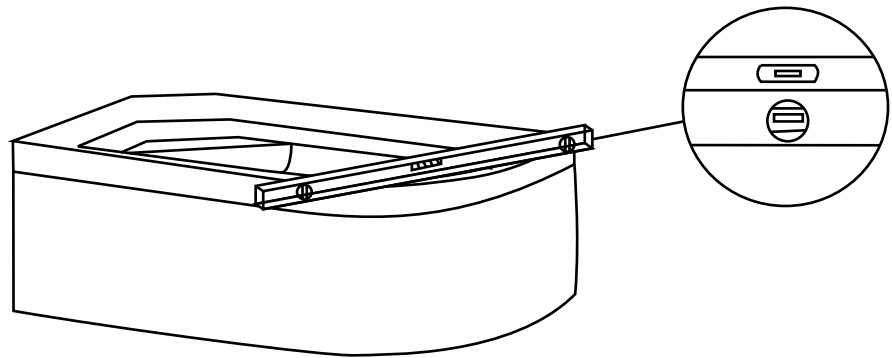


Lift the rear part of bottom basin, and then insert one end of the pipe into the drainage hole

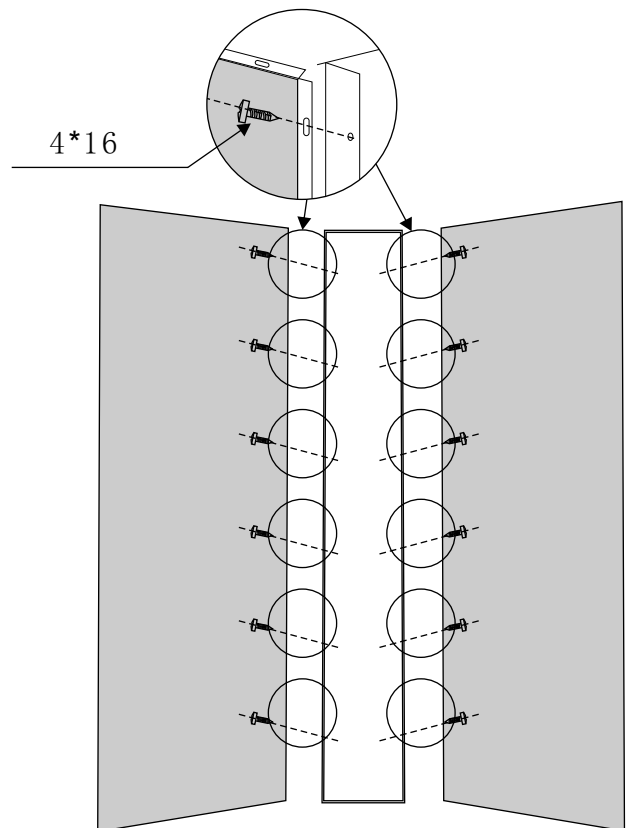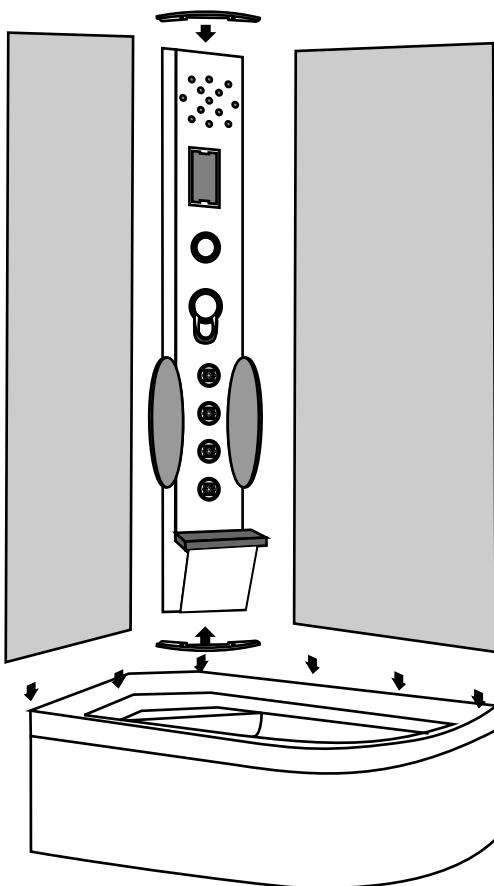


8423/8424

Installation instructions

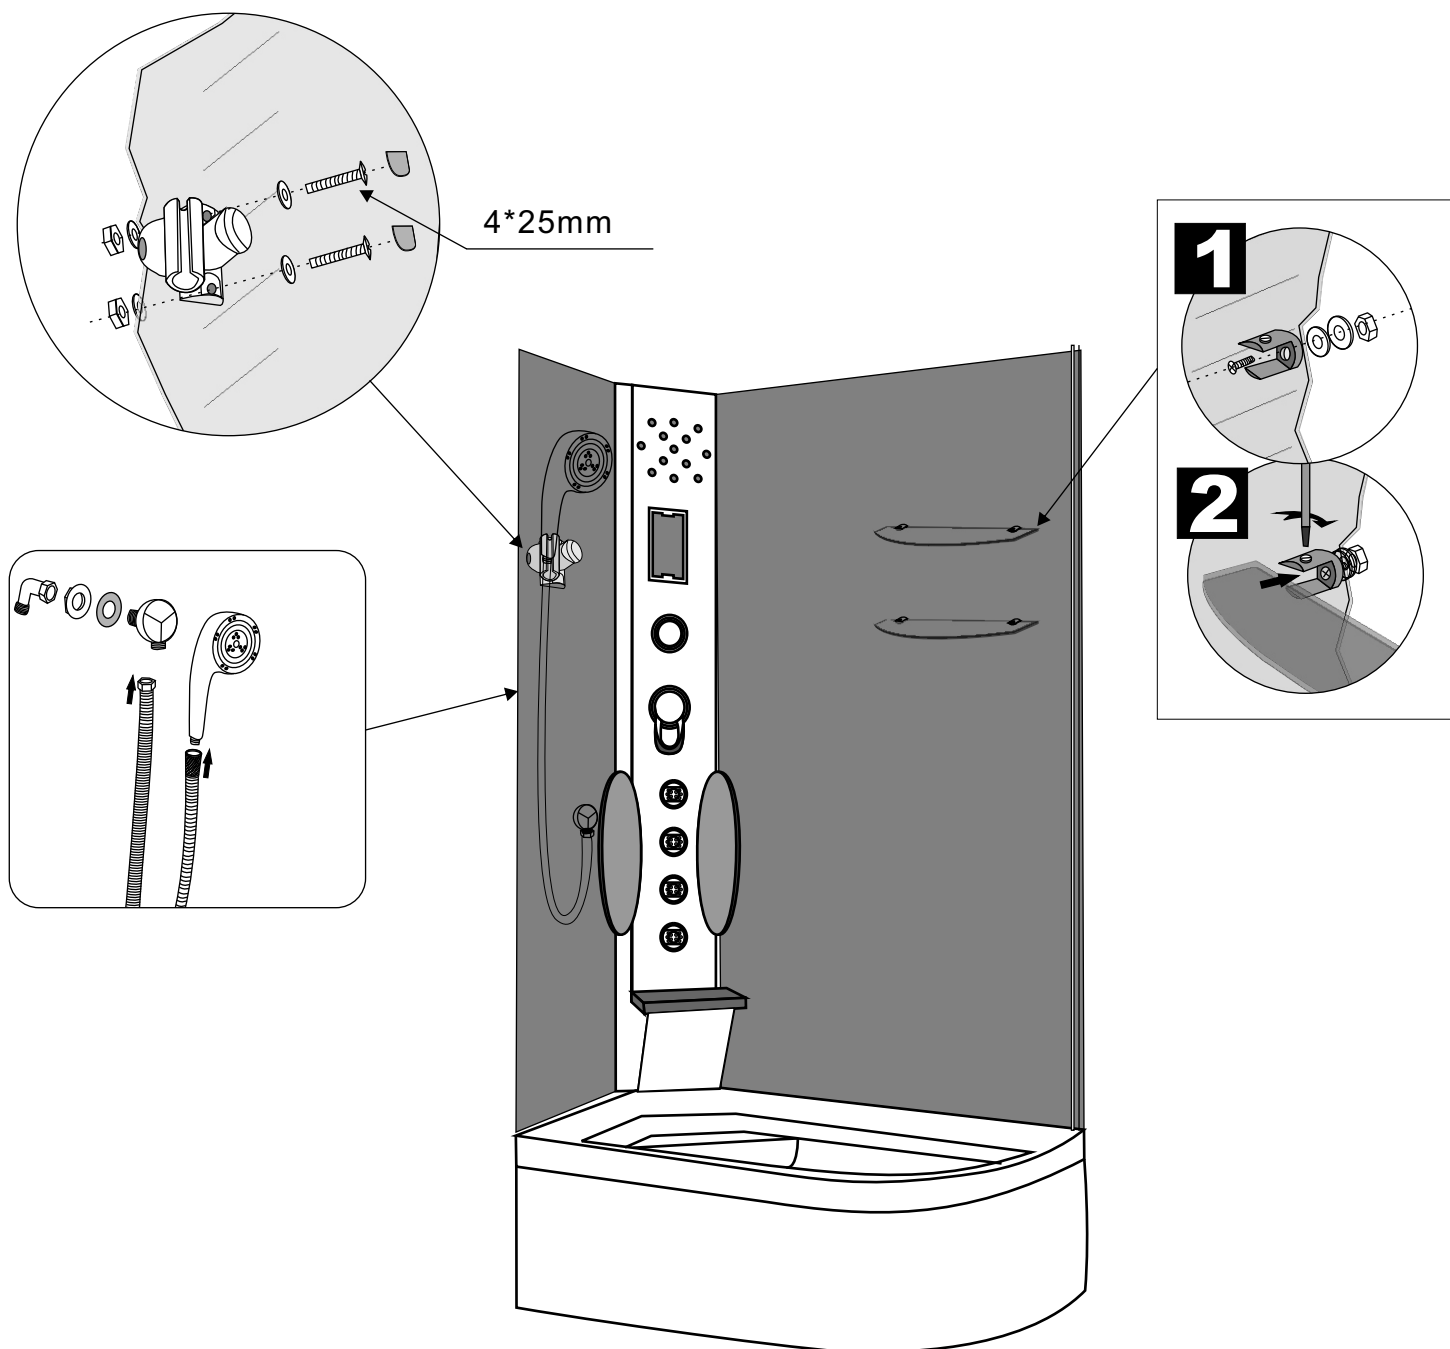



8423/8424

Installation instructions


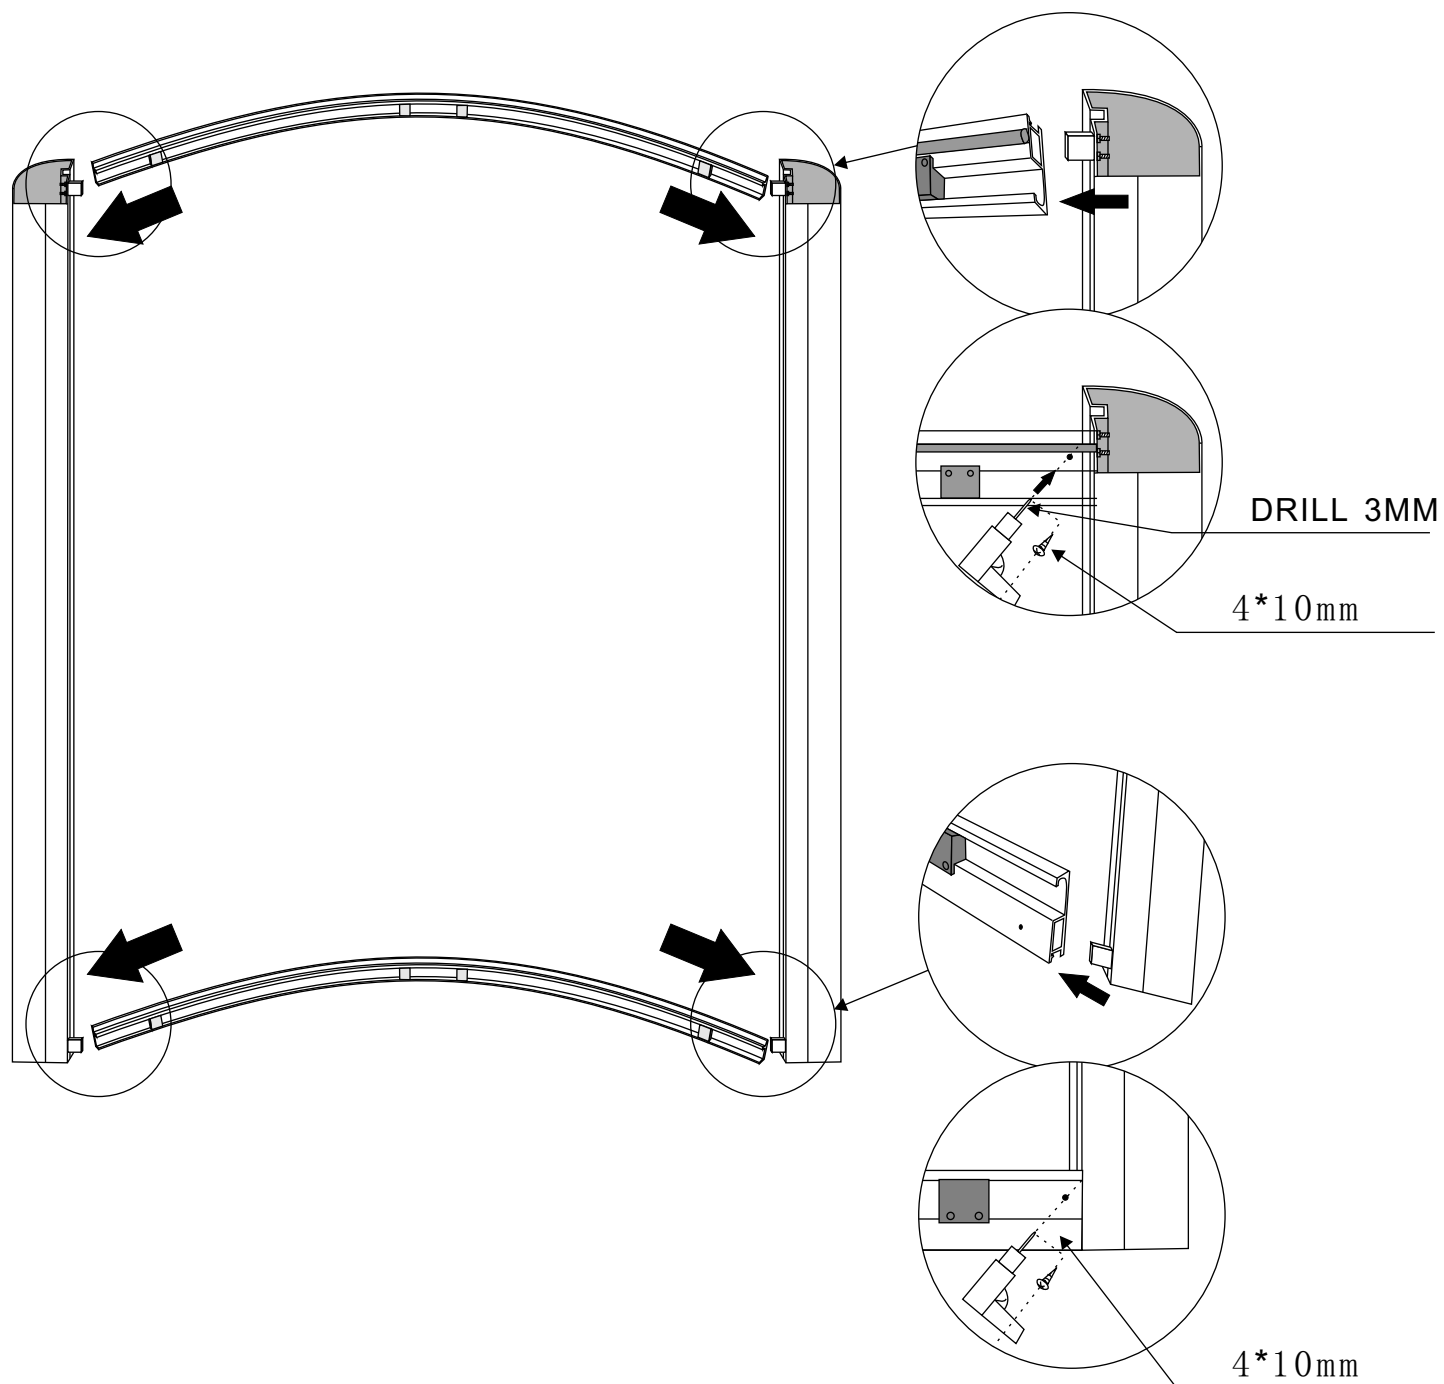


8423/8424

Installation instructions

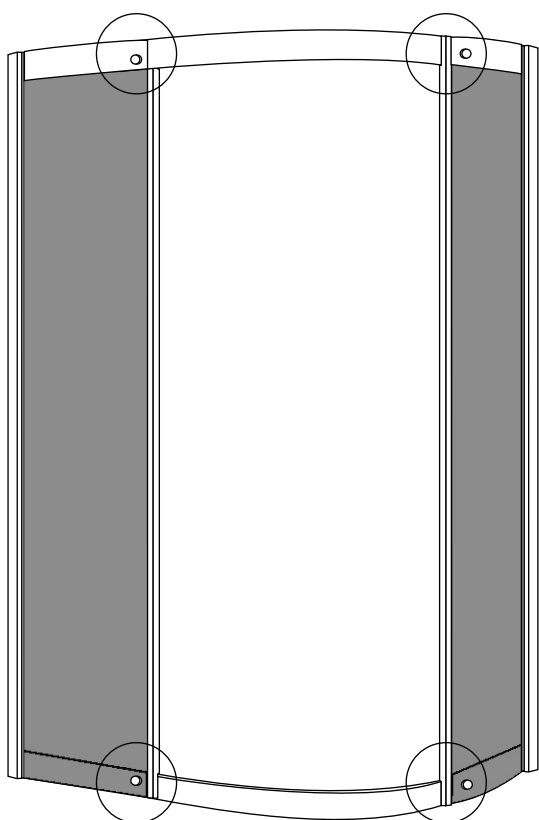
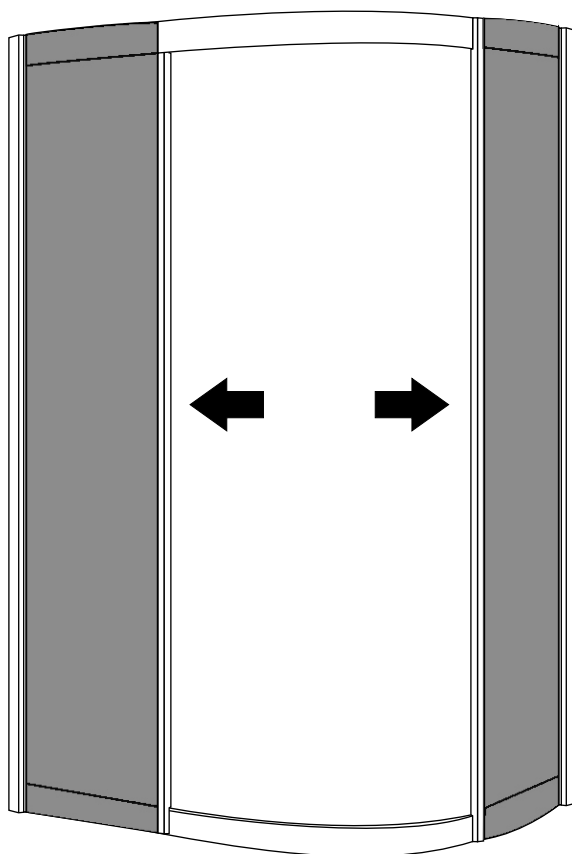


4-6*24mm

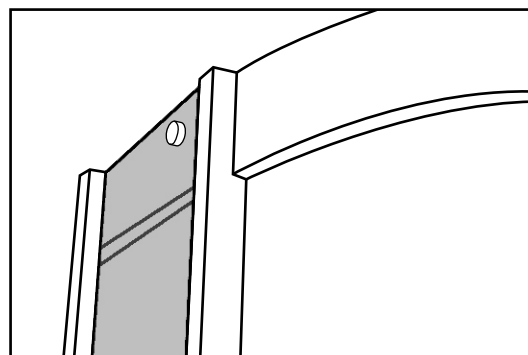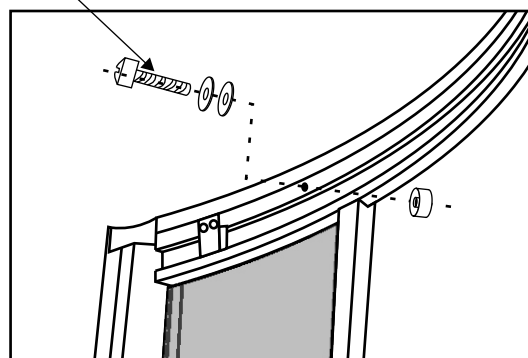


8423/8424

Installation instructions

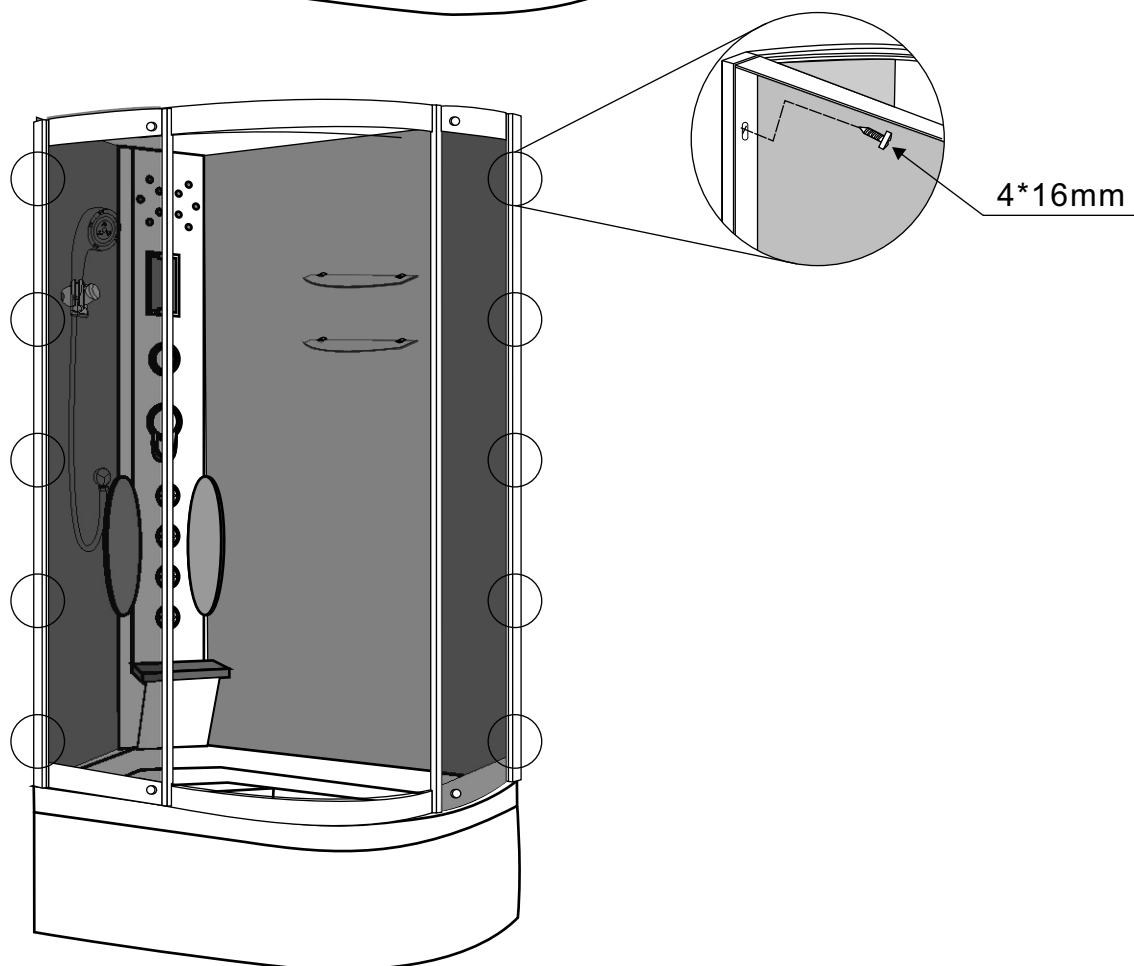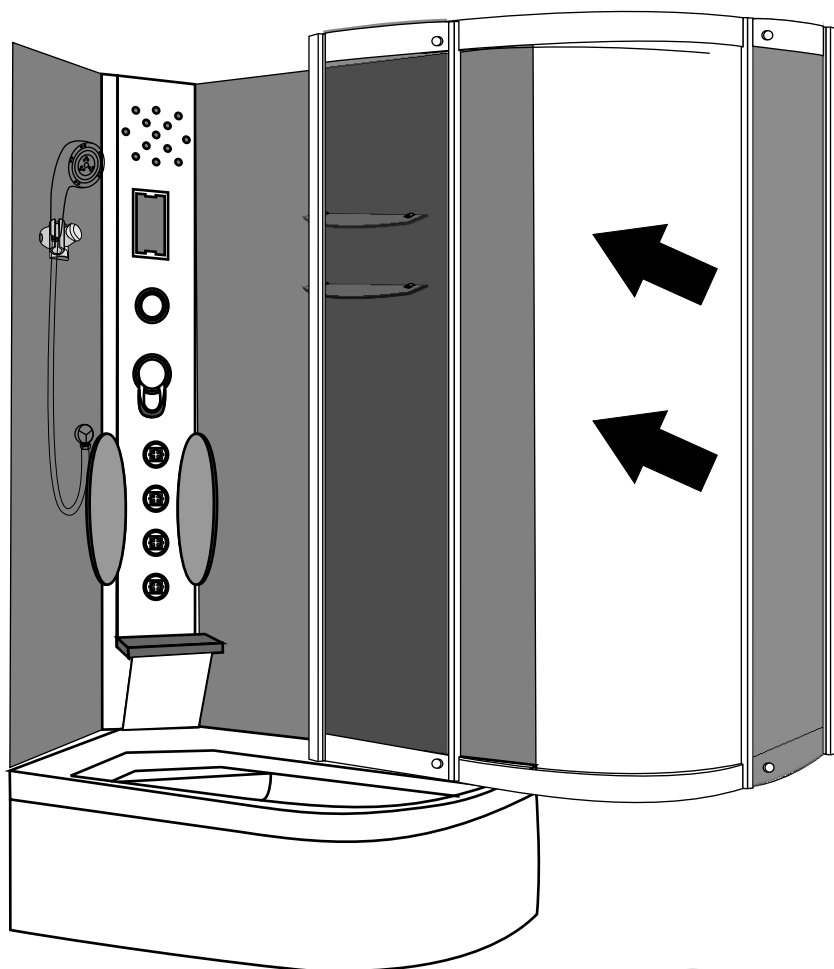




8423/8424

Installation instructions

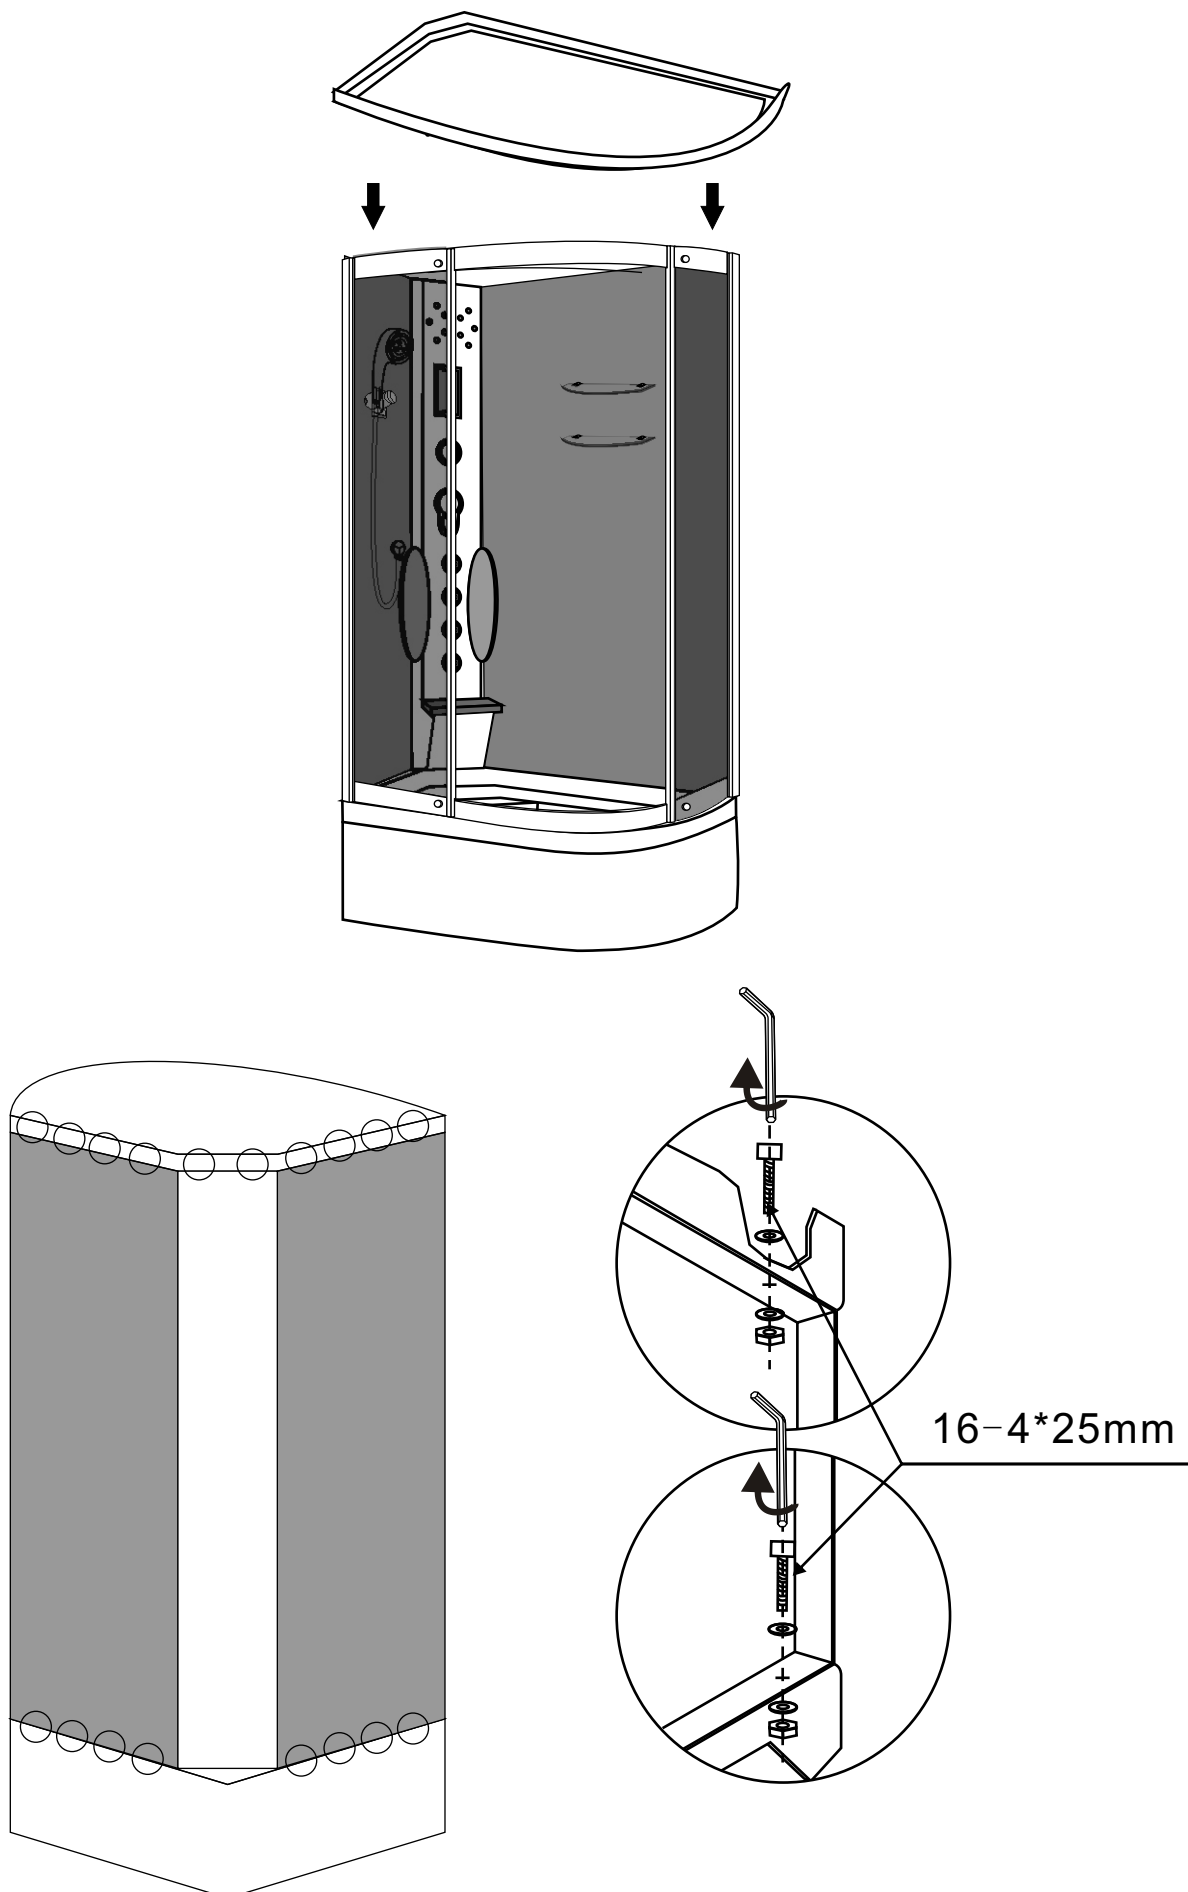





8423/8424

Installation instructions

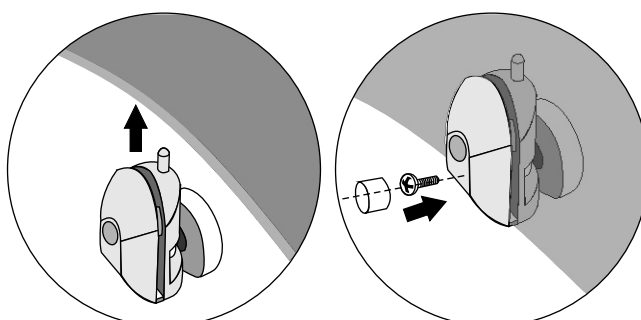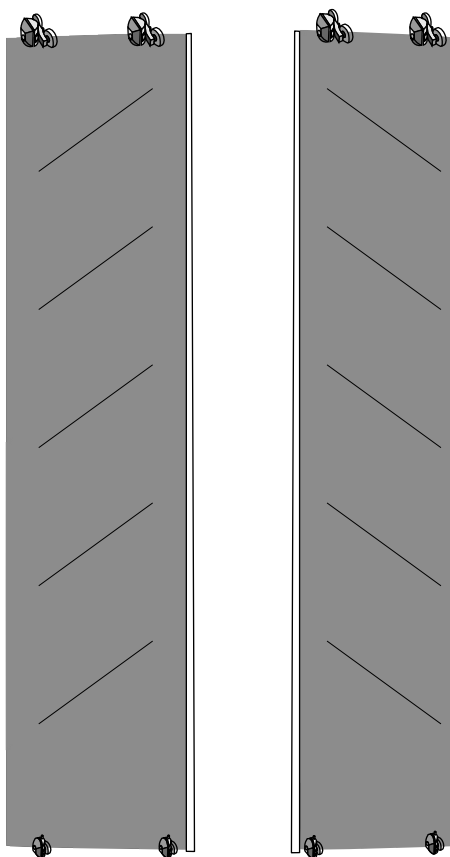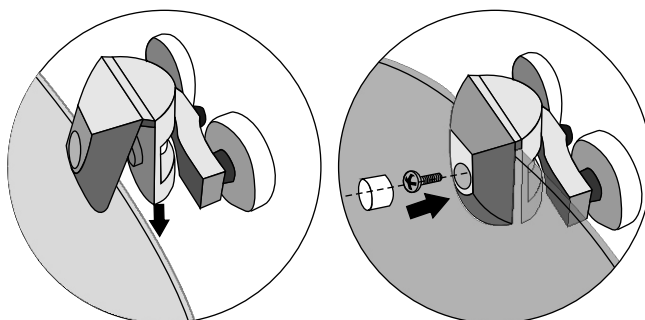



8423/8424

Installation instructions

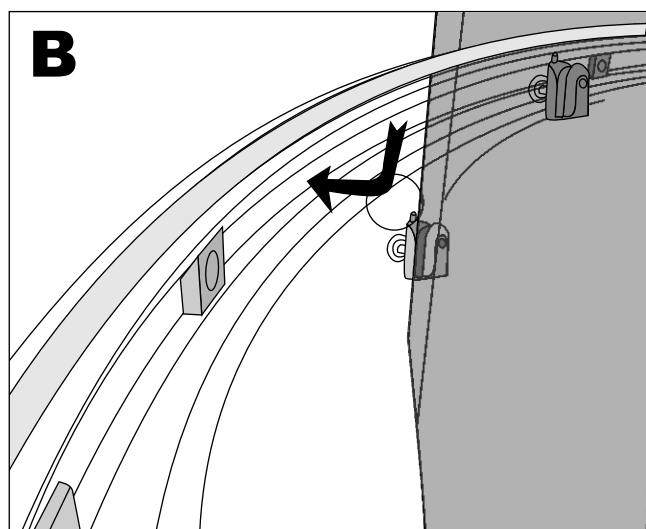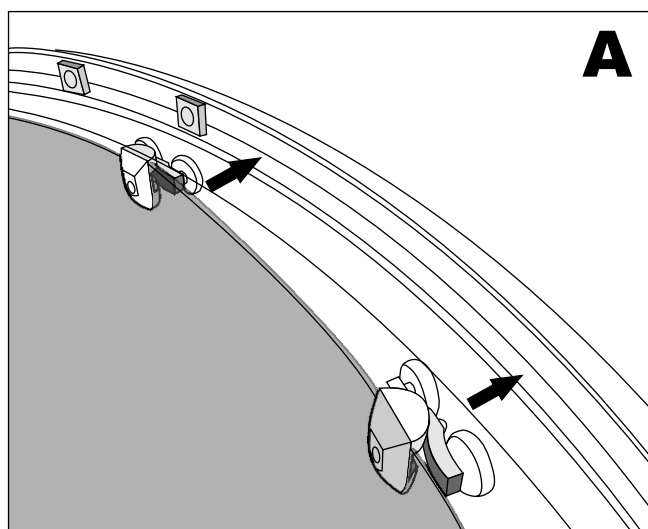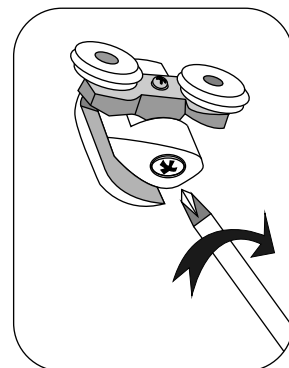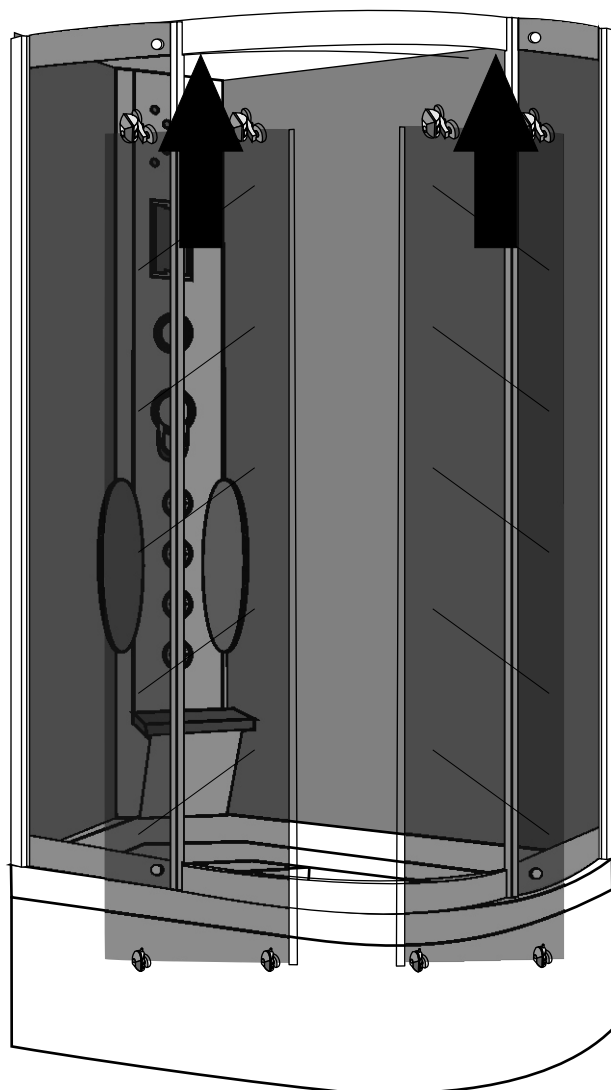

8423/8424

Installation instructions

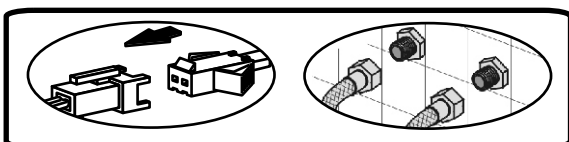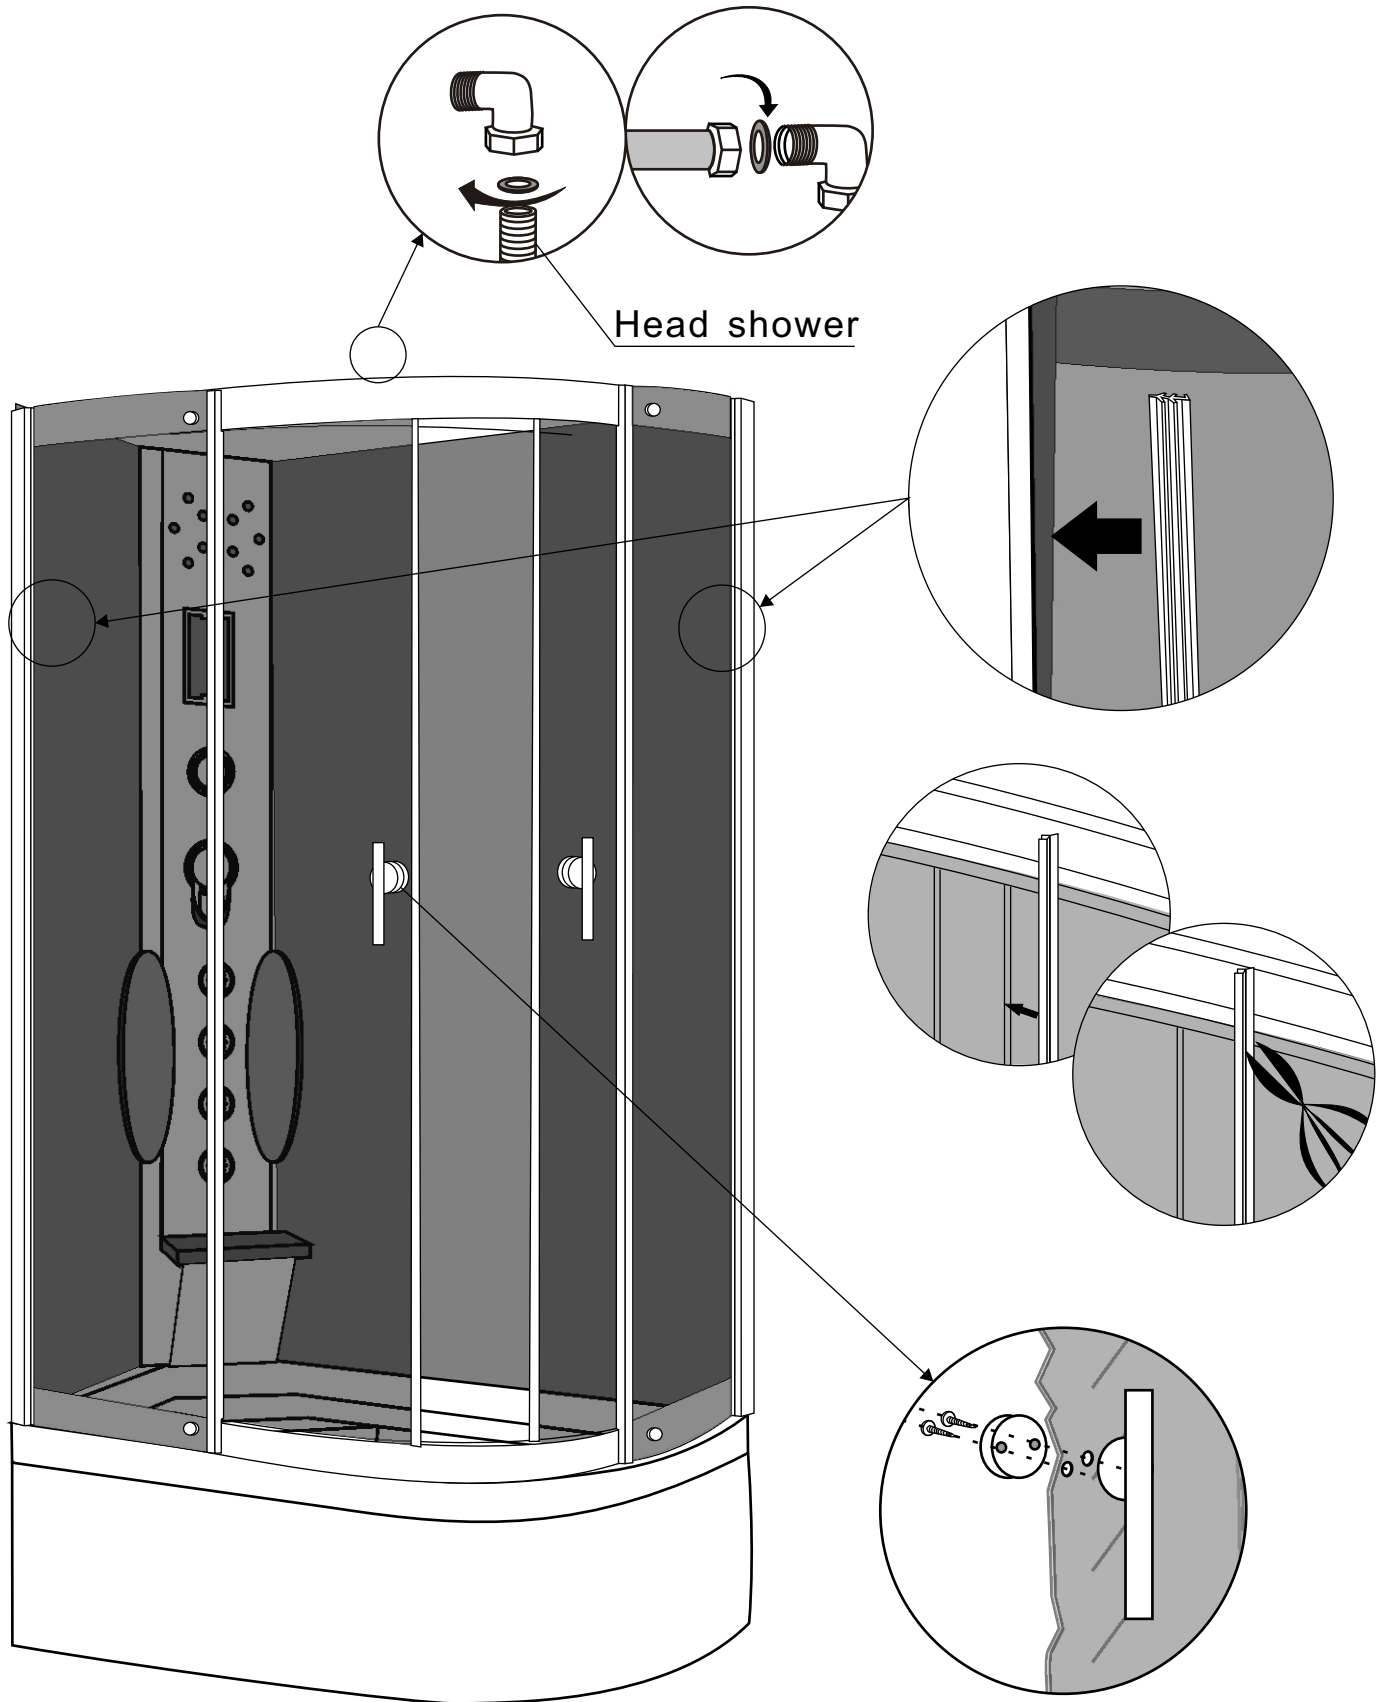

connect the electrical wire of bungalow, power and etc. correctly, connect the hose of head shower, hot water hose and cold water hose correctly, put the antenna to the top.