


8416/8417/8420

Installation instructions

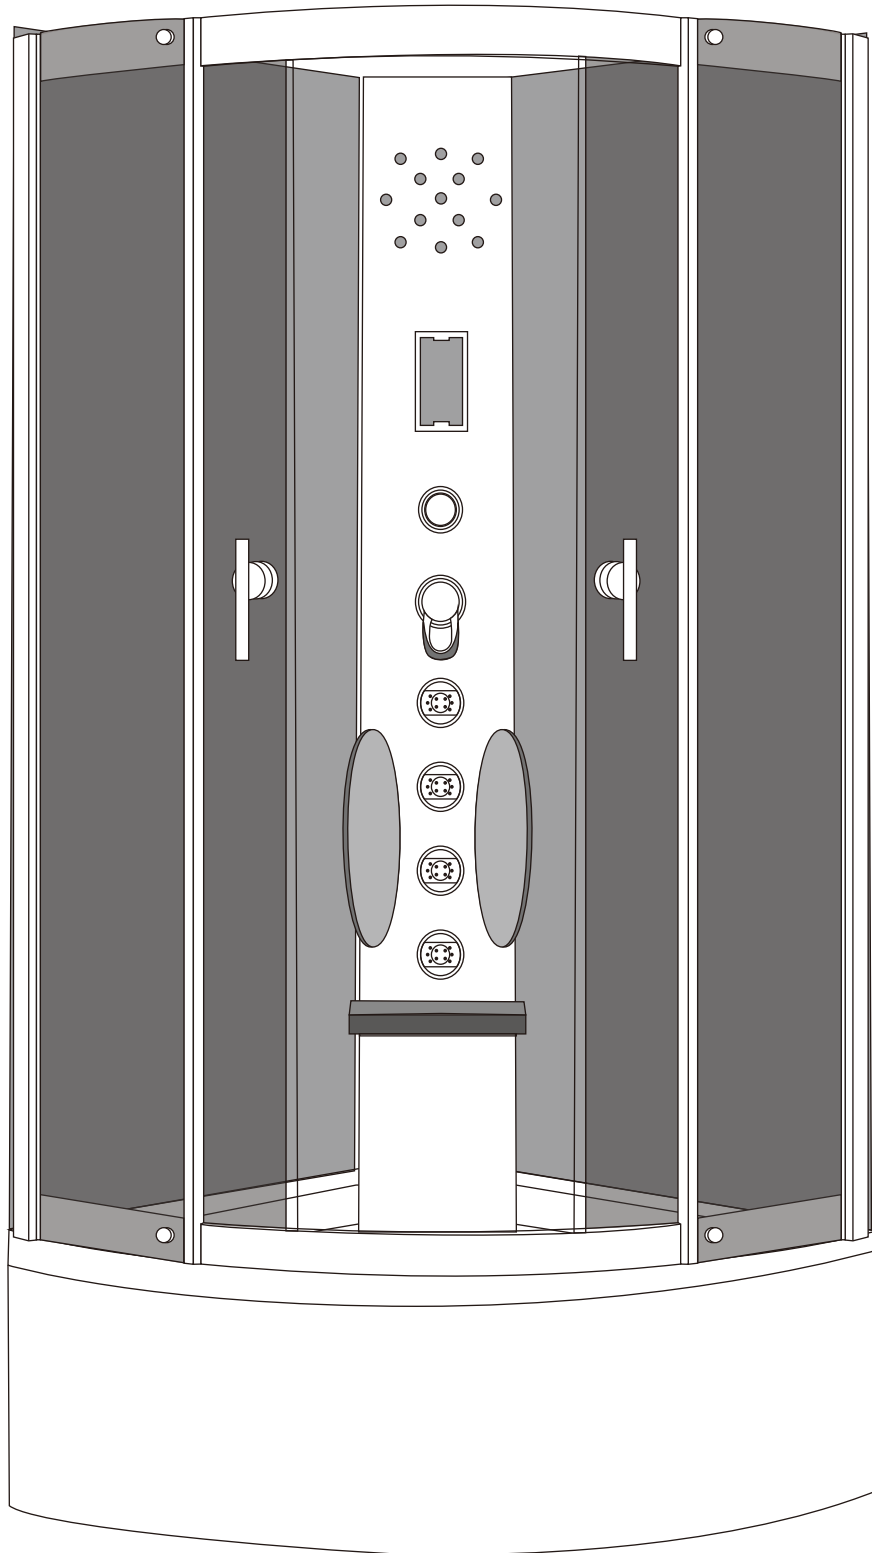


SIZE : 1000*1000*2100 MM

8416/8417/8420

Installation instructions


4 boxes are included, please check the pack and make sure you got all the parts listed.

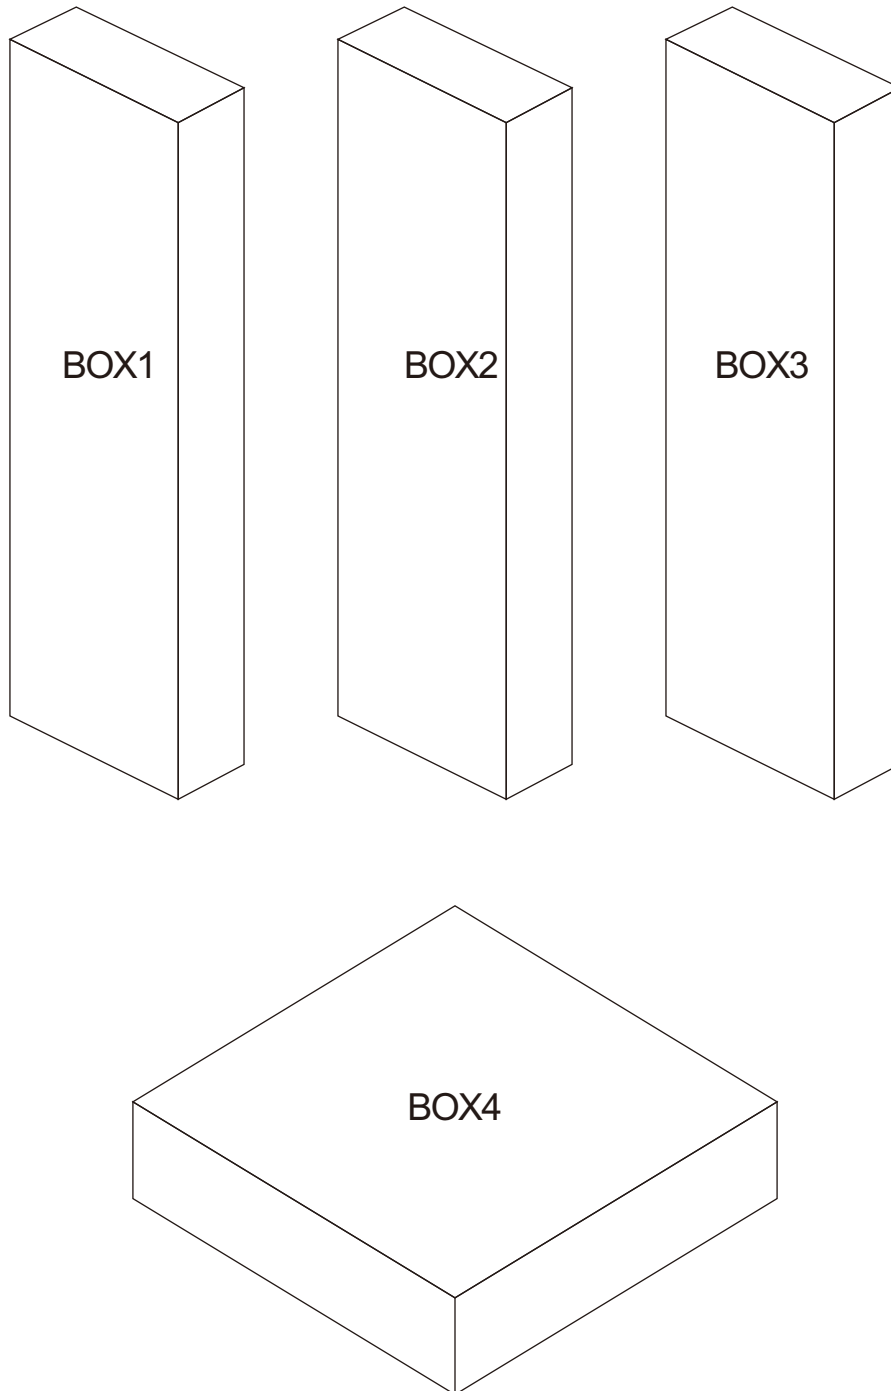

8416/8417/8420

Installation instructions


BOX1

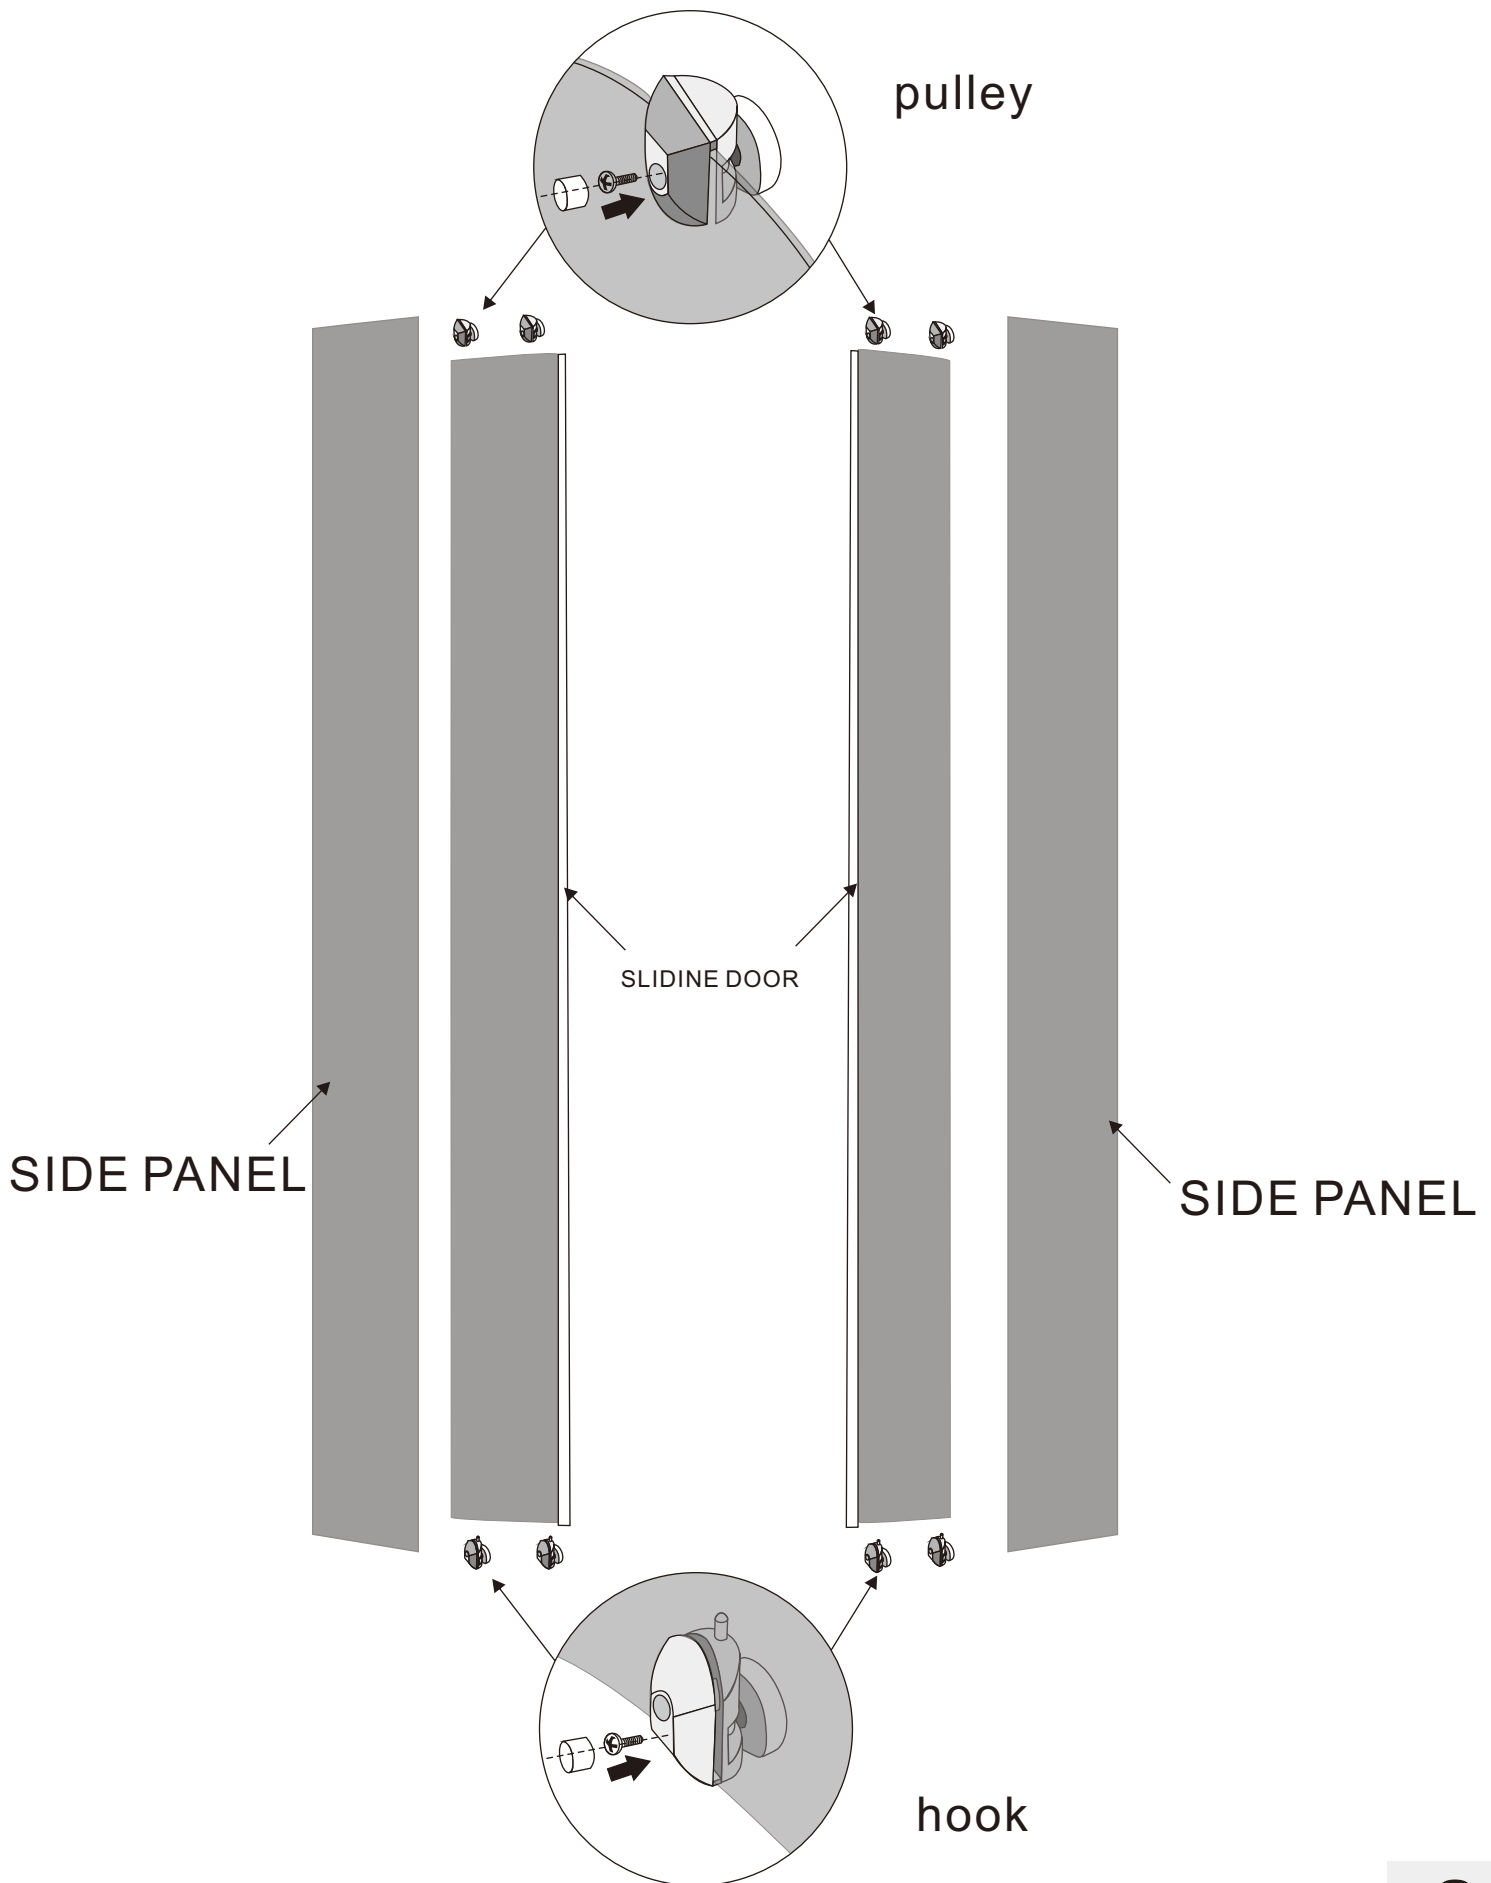


8416/8417/8420

Installation instructions

BOX2



SHOWER BACK LEFT GLASS




SHOWER BACK RIGHT GLASS

8416/8417/8420

Installation instructions



BOX3

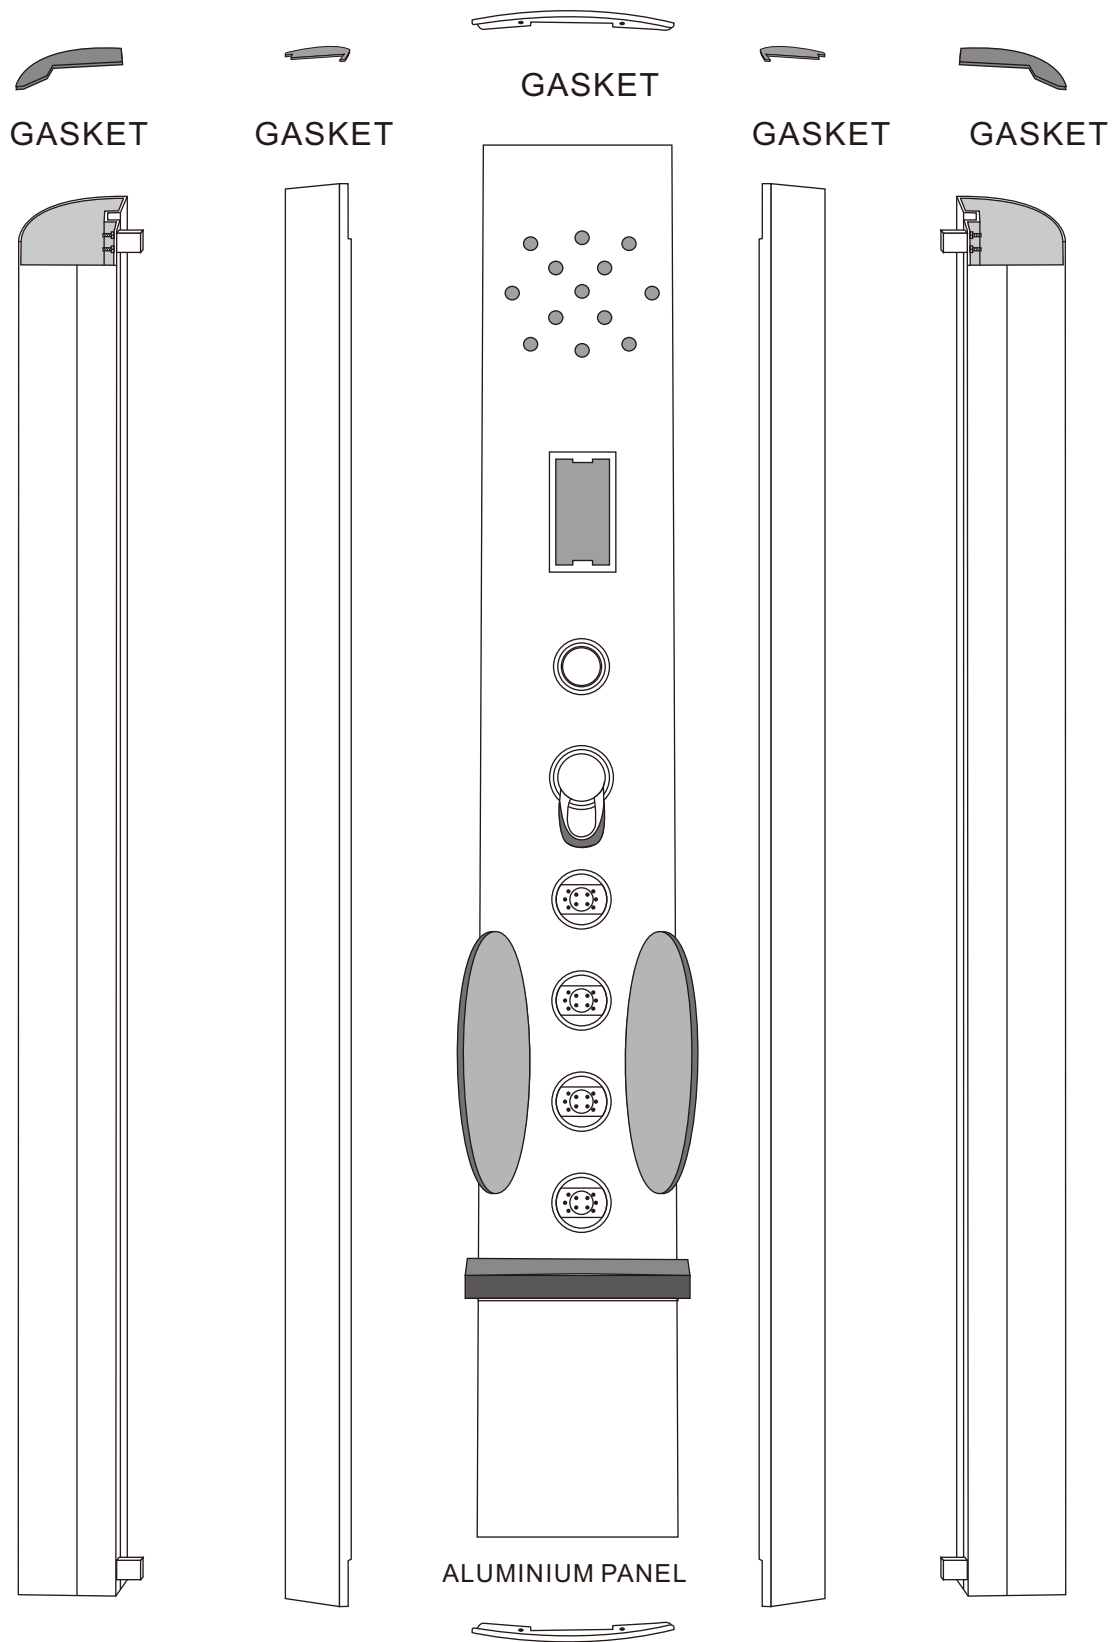



8416/8417/8420

Installation instructions


BOX4

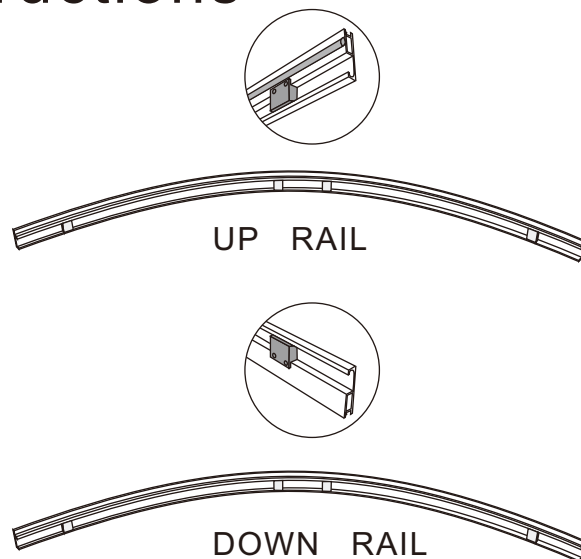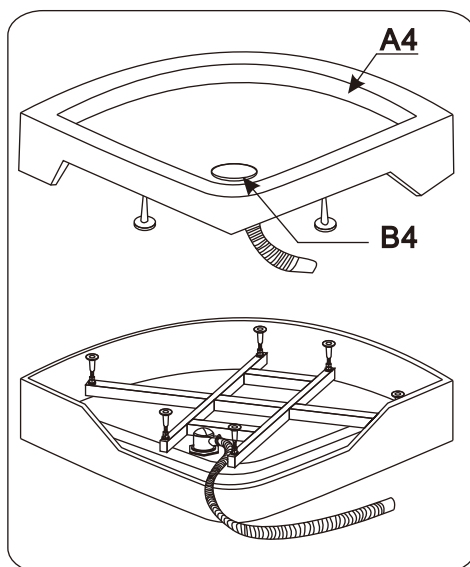

Ref	Description	Qty
A4	SHOWER TRAY 900X900MM HEIGHT 160MM	1
B4	PULL OUT WASTE 58MM	1

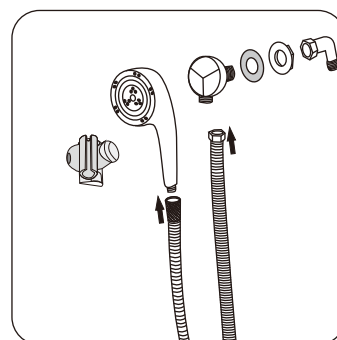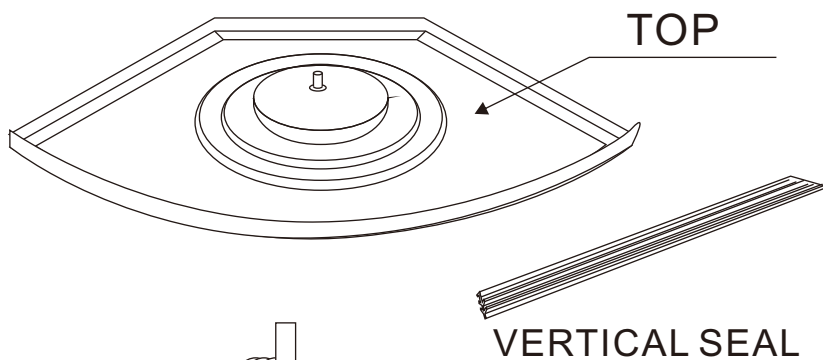

STAND



HANDLE

VERTICAL SEAL

SHOWER HEAD


Ref	Description	Illustration	Qty
A	4*16		2
B	4*16		12
C	4*16		8

Ref	Description	Illustration	Qty
D	4*16		22
E	4*10		4
F	6*25		2
G	6*16		2

8416/8417/8420


Installation instructions

1.

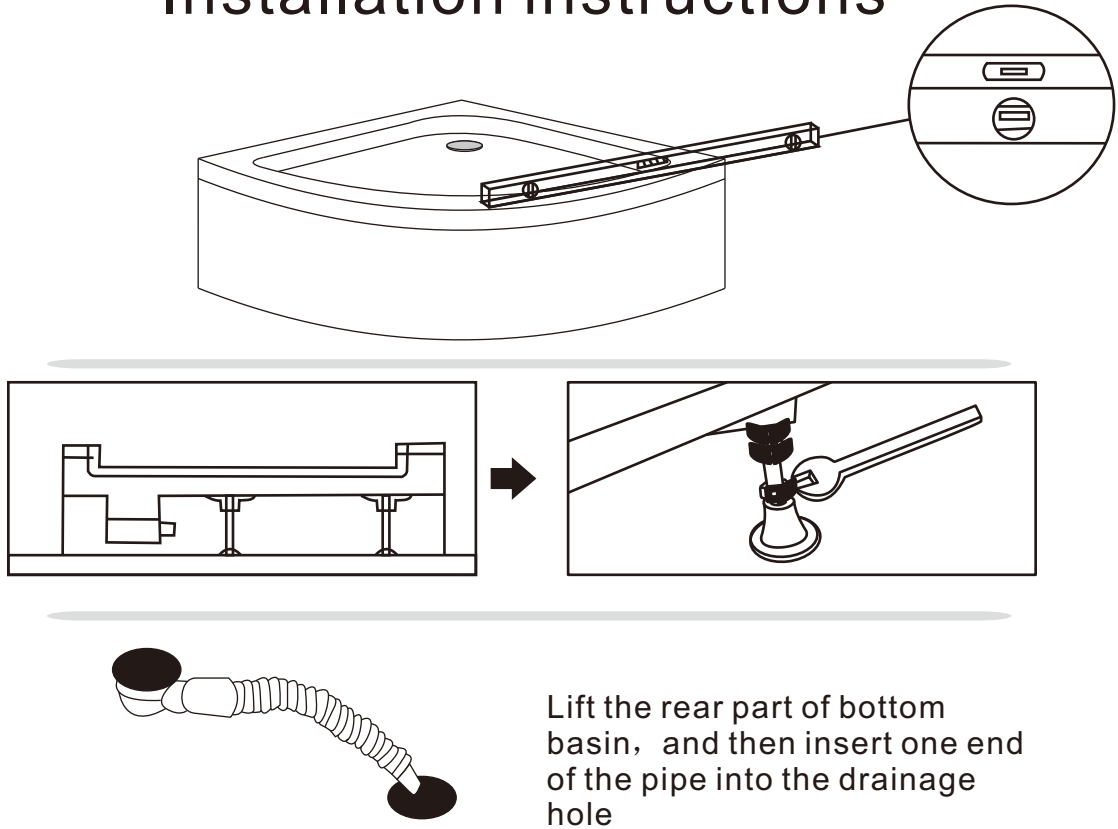

Lift the rear part of bottom basin, and then insert one end of the pipe into the drainage hole


2.

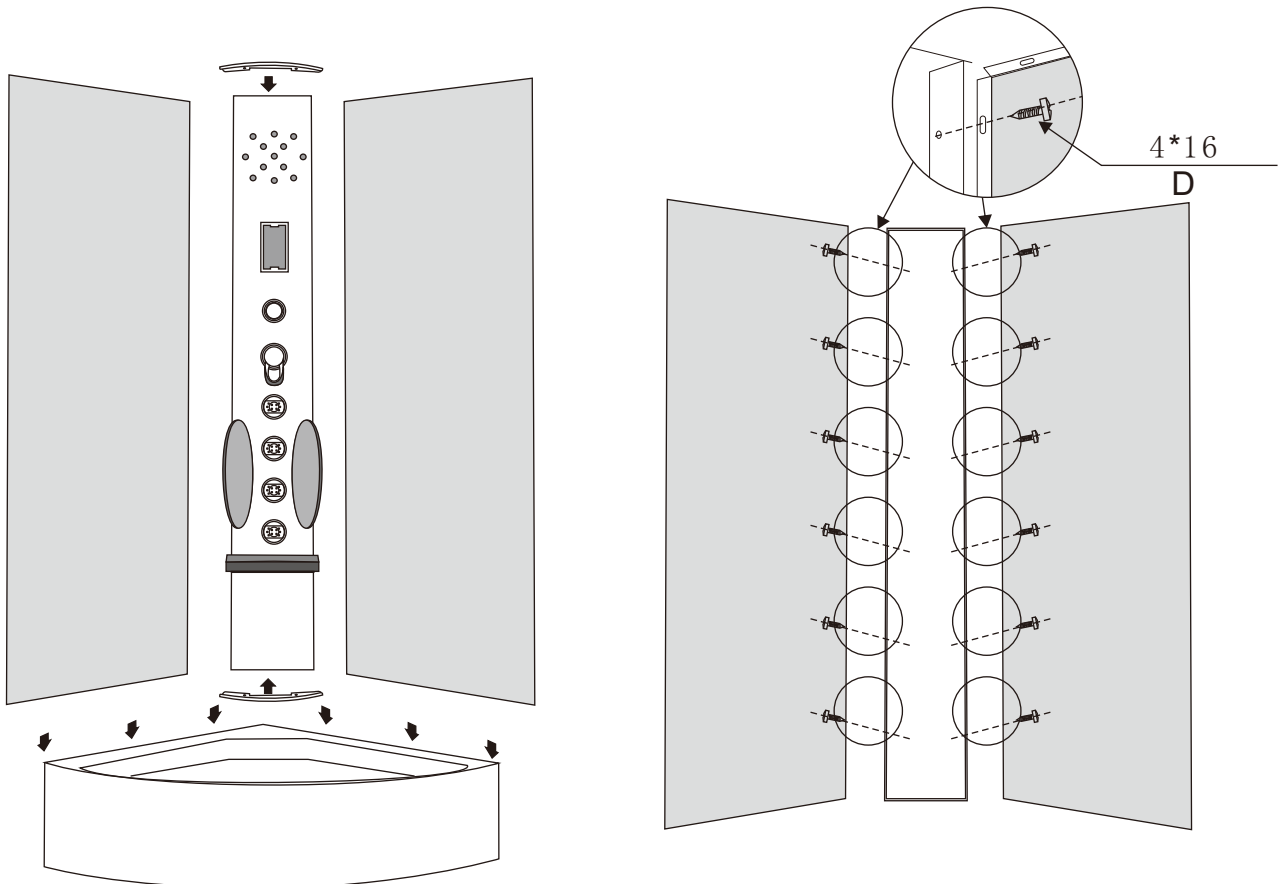

8416/8417/8420

Installation instructions

3.

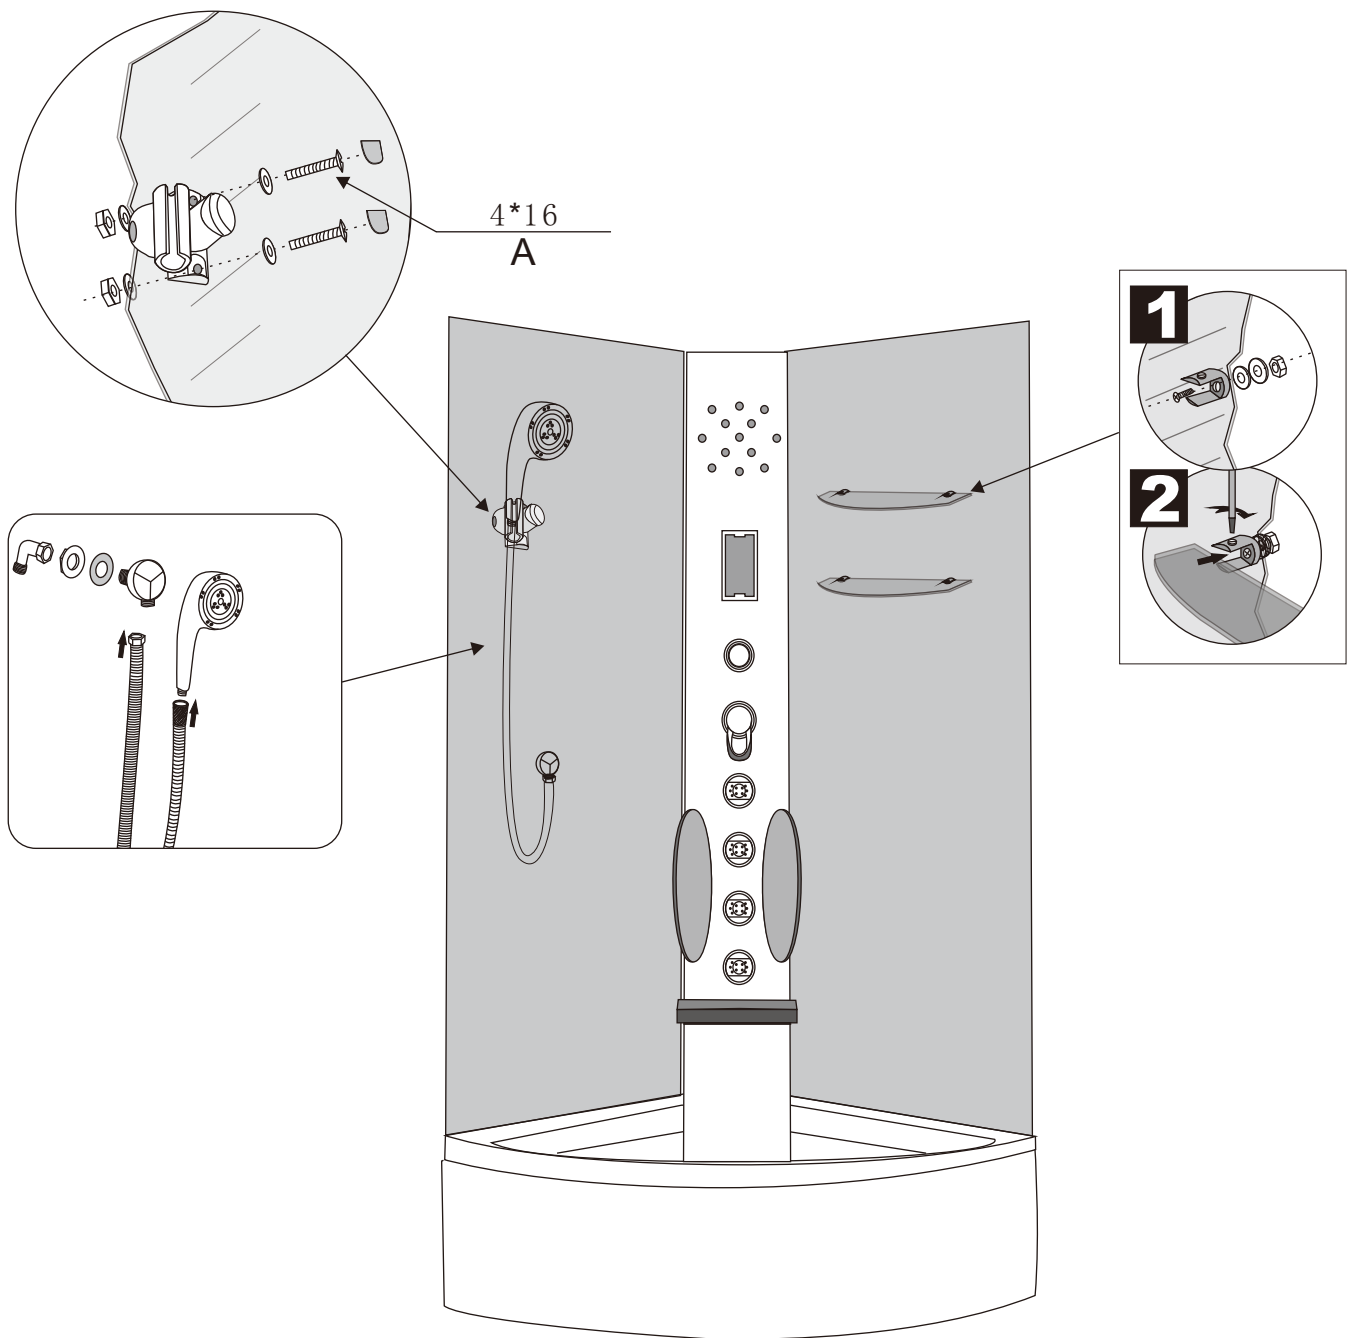


8416/8417/8420

Installation instructions

4.


(1)

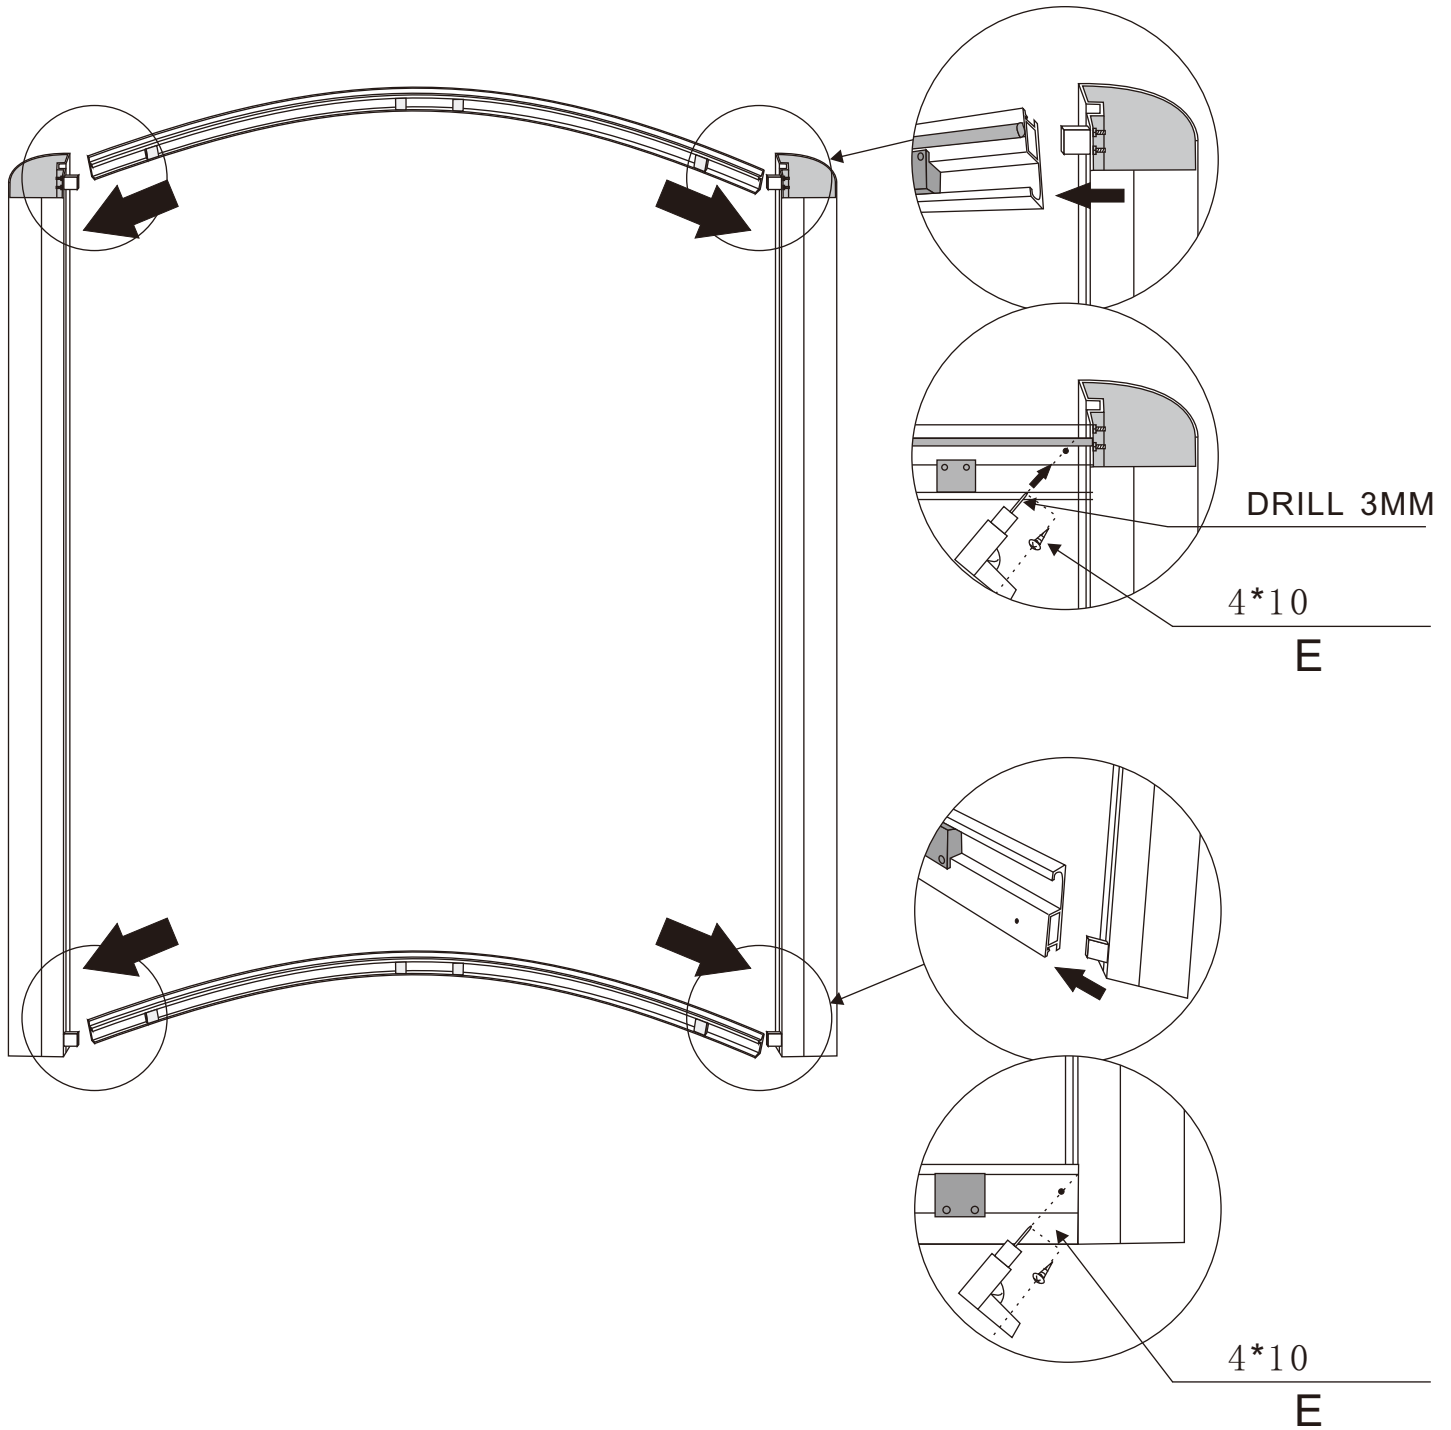


8416/8417/8420

Installation instructions

(2)

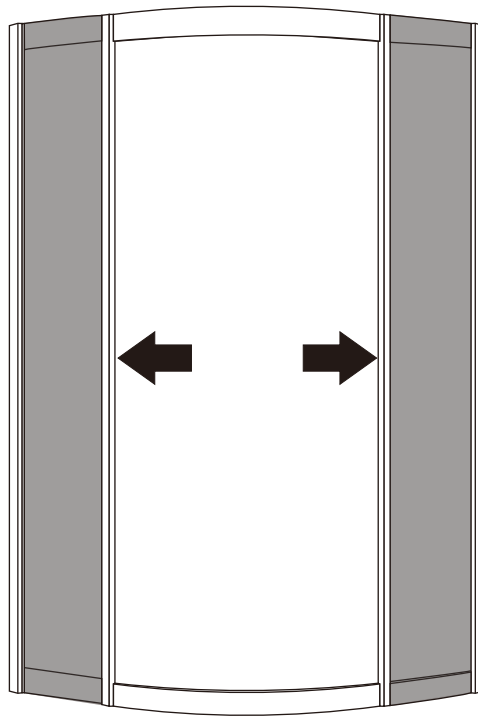



(3)

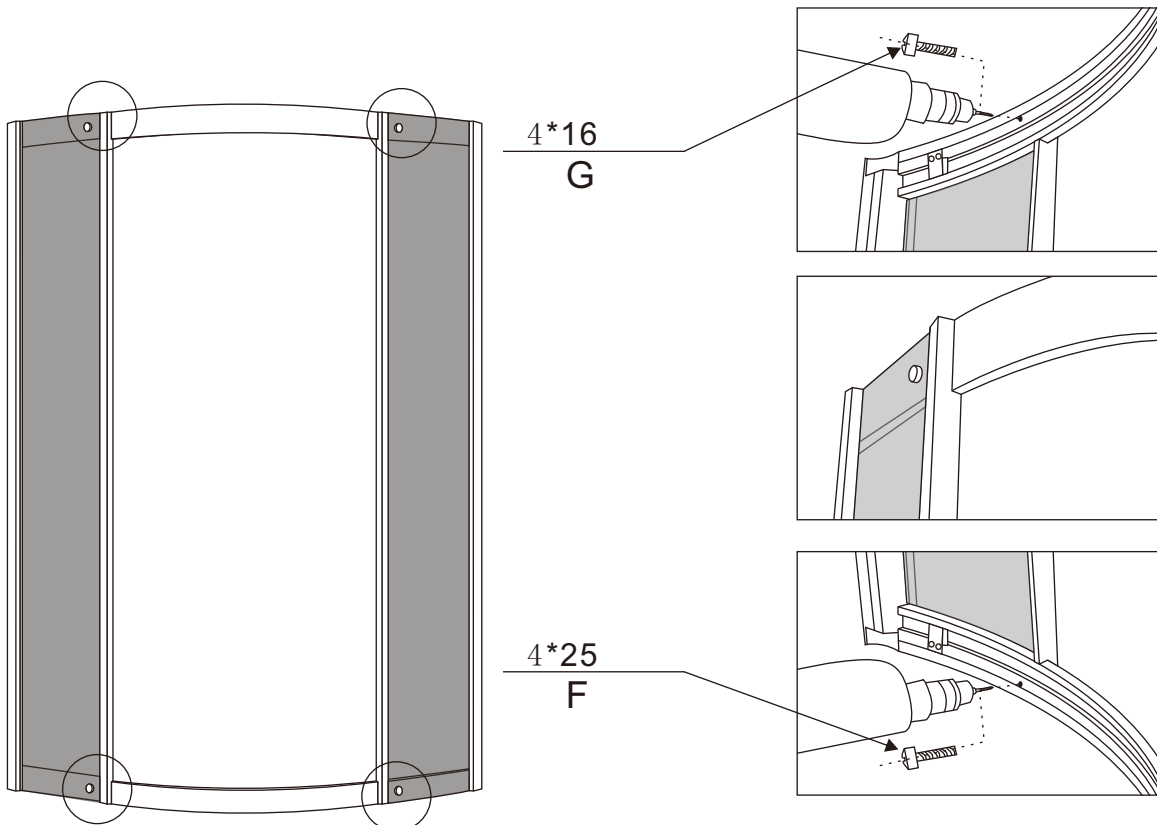

8416/8417/8420

Installation instructions



5.

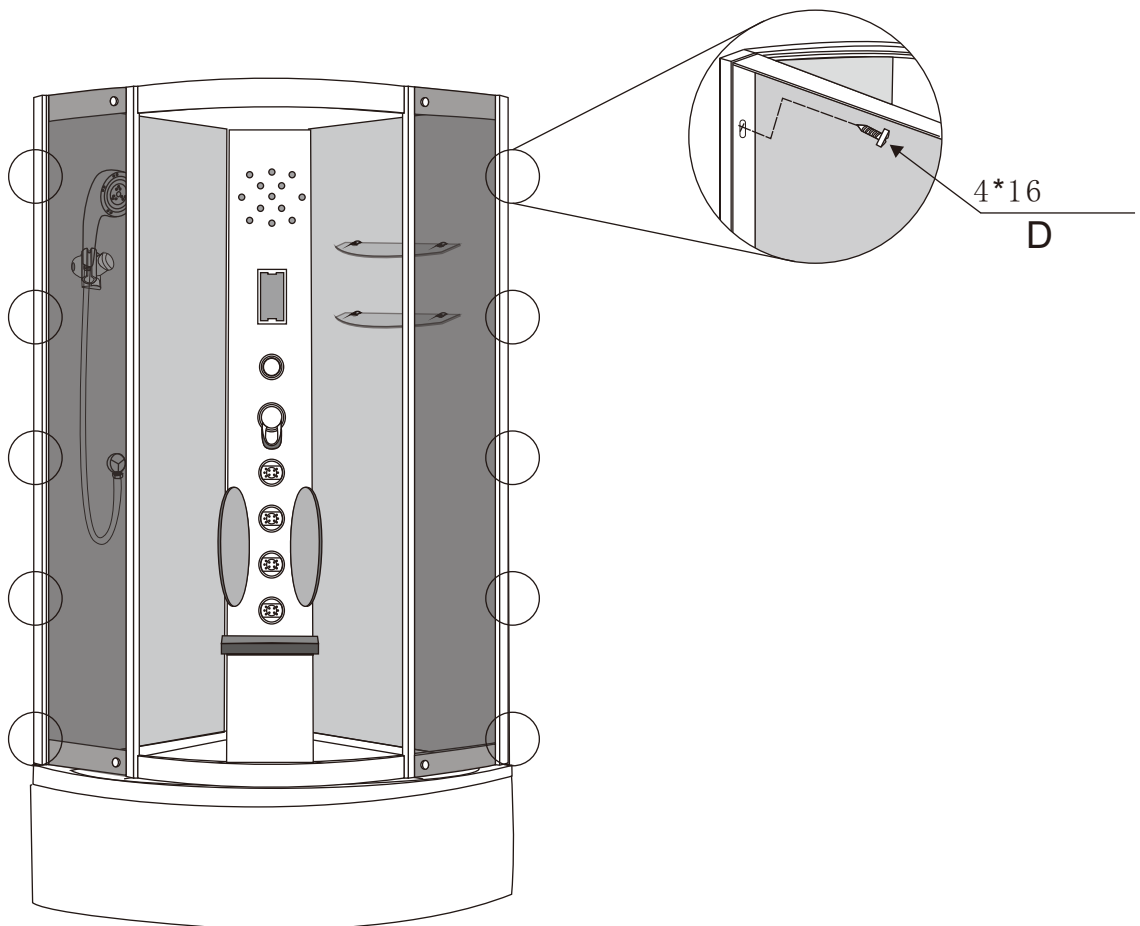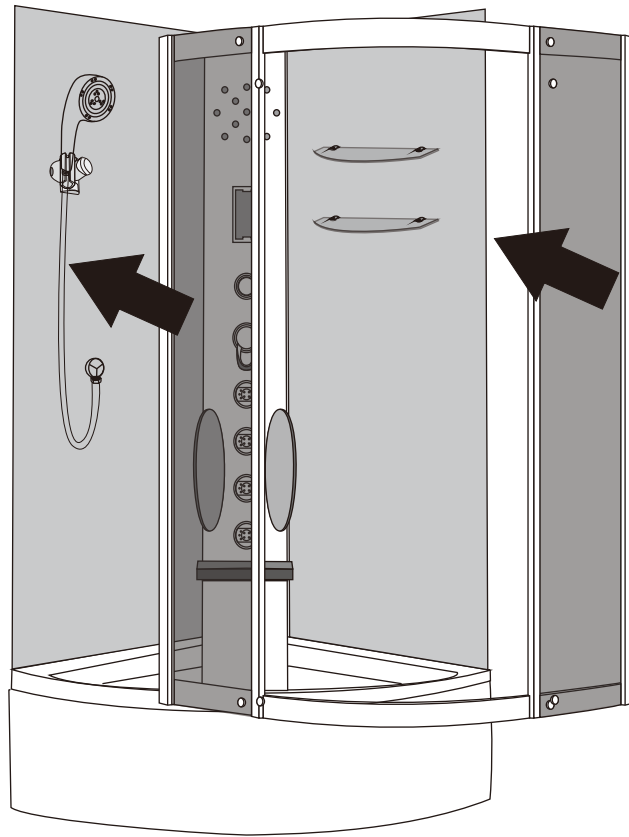


8416/8417/8420

Installation instructions



6.

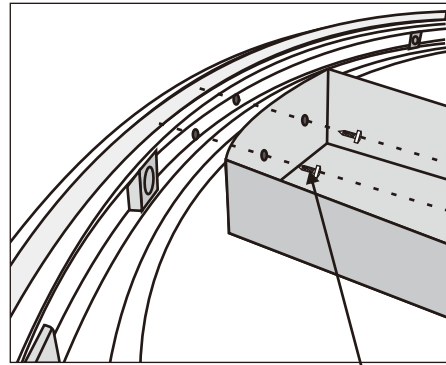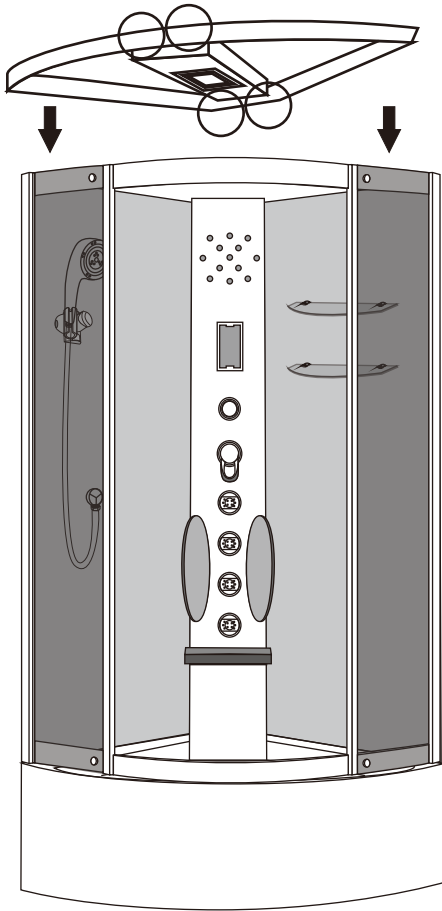


4*10mm

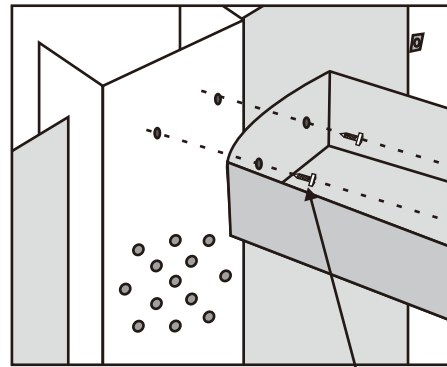

4*10mm

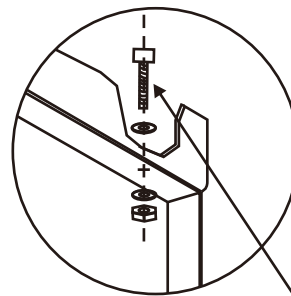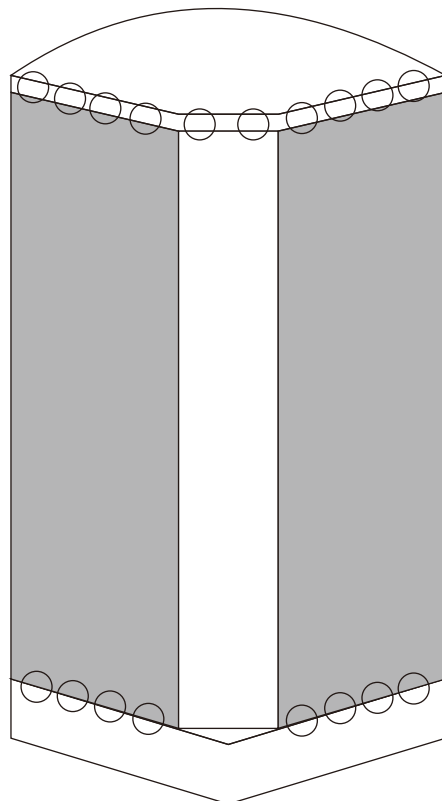







4*16mm

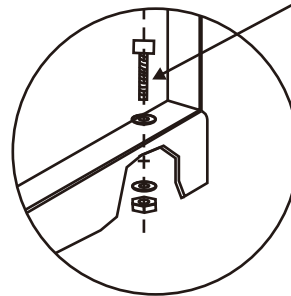

8416/8417/8420

Installation instructions




6.

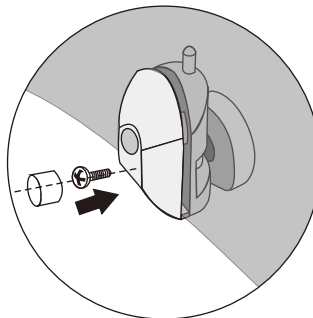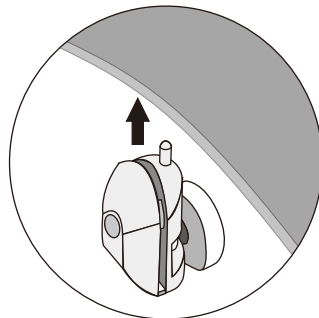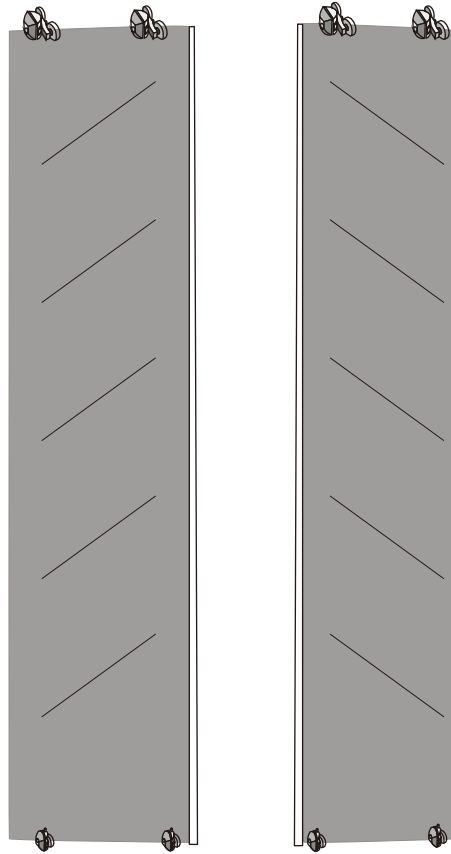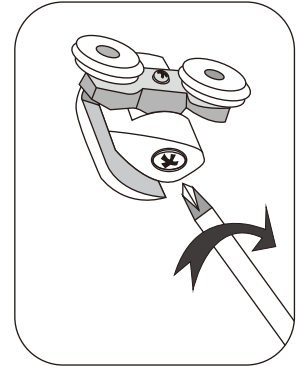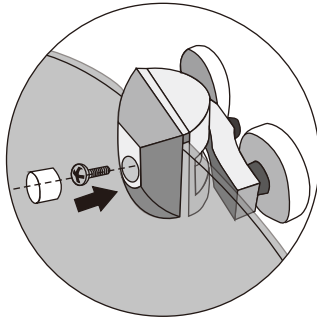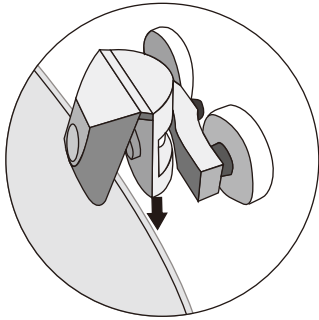

8416/8417/8420

Installation instructions


7.

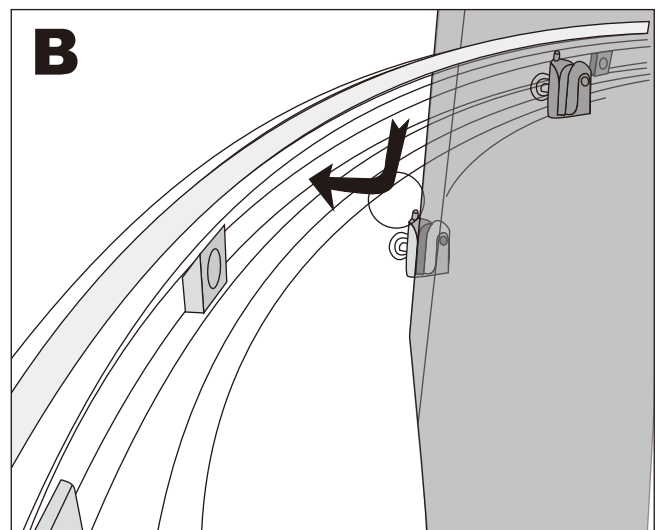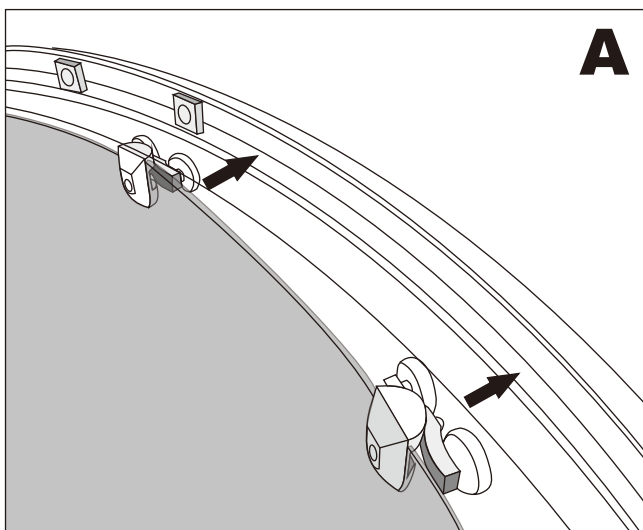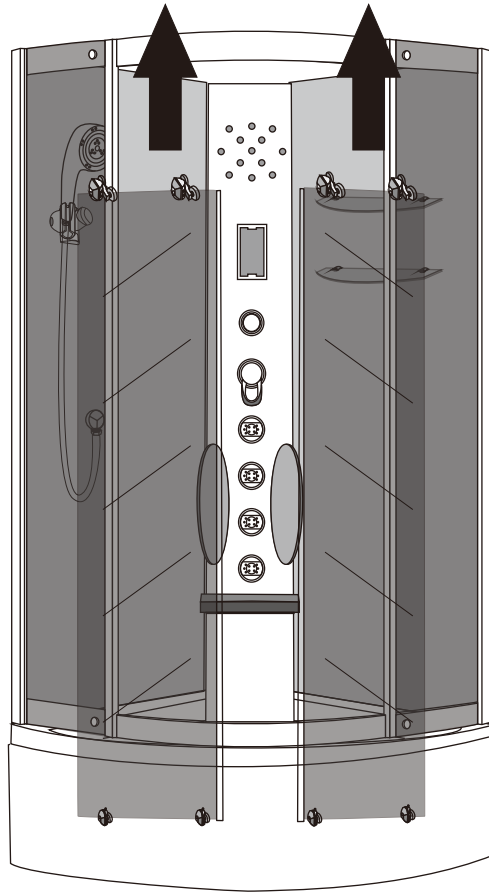

8416/8417/8420

Installation instructions

8.

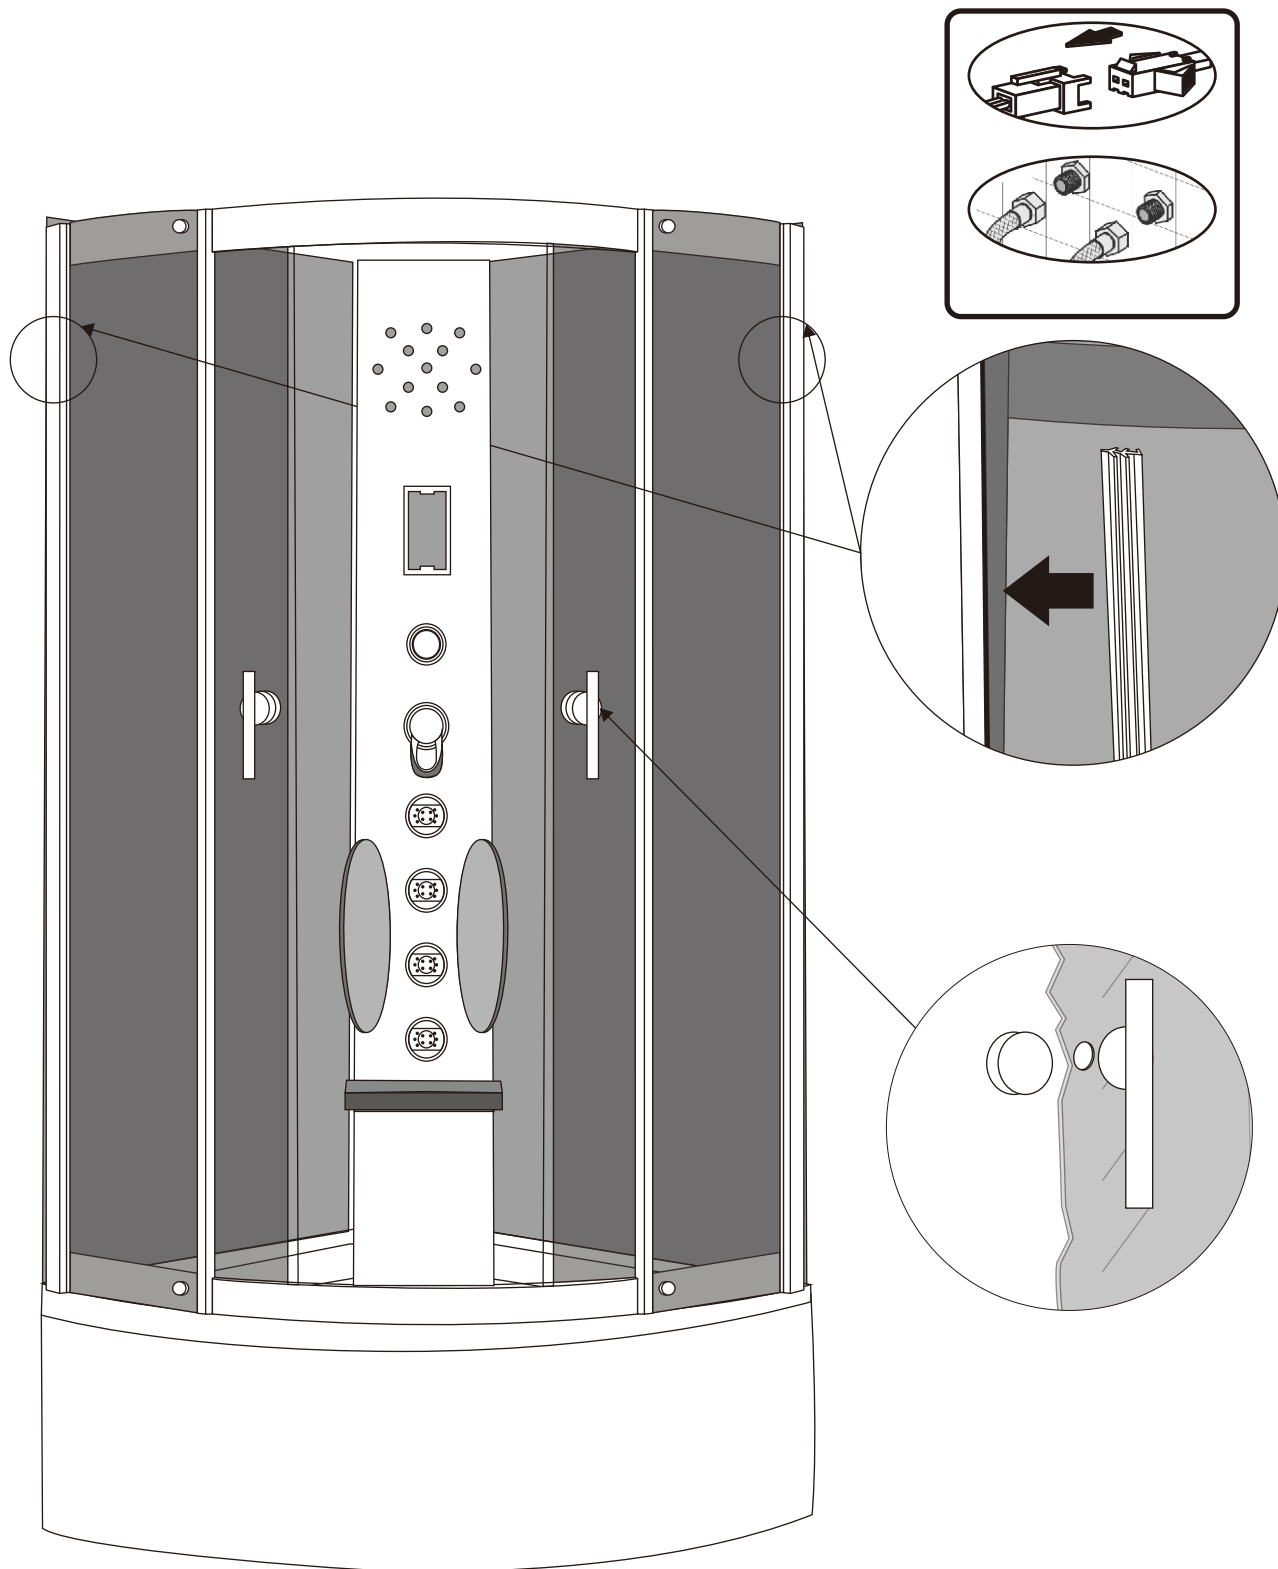

connect the electrical wire of bungalow, power and etc. correctly, connect the hose of head shower, hot water hose and cold water hose correctly, put the antenna to the top.

8416/8417/8420

Installation instructions

